ORDER NO.SIMMC 0402011A1
E2

Service Manual

Microwave Oven

NN-P294 / NN-H264 / NN-S254

APH(USA)
CPH(CANADA)

Please file and use this manual together with the service manual for Model No.NN-S262SF, Order No.SIMMC0203005C1.

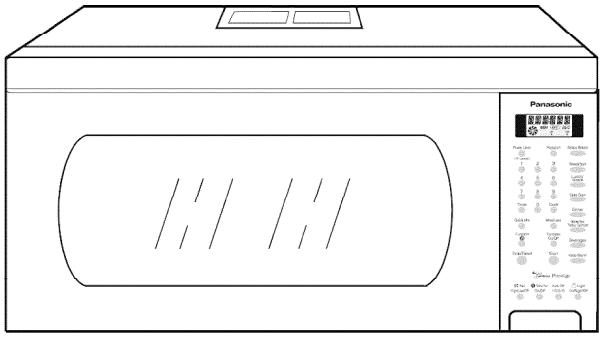

SPECIFICATIONS

Microwave Oven 1
1. SCHEMATIC DIAGRAM 5
1.1. APH 6
1.2. CPH 6
2. MEASUREMENTS AND ADJUSTMENTS 7
2.1. Adjustment of primary latch switch, door switch and short switch. 7
2.2. Measurement of microwave output 8
TABLE (1L-1min.test) 9
3. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE 9
3.1. Equipment 9
3.2. Procedure for measuring radiation leakage 9
3.2.1. Measurement with the outer panel removed. 10
3.2.2. Measurements with a fully assembled oven. 10
3.3. Record keeping and notification after measurement 10
3.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer. 11
4. EXPLODED VIEW AND PARTS LIST 11
4.1. EXPLODED VIEW 11
4.2. PARTS LIST 12
4.3. DOOR ASSEMBLY 15
4.4. WIRING MATERIALS 16
4.5. ESCUTCHEON BASE ASSEMBLY 16
4.5.1. NN-P294 16
4.5.2. NN-H264, NN-S254 18
4.6. PACKING AND ACCESSORIES 19
5. DIGITAL PROGRAMMER CIRCUIT 20
5.1. NN-P294 APH/CPH 20
5.2. NN-H264 APH/CPH, NN-S254 APH/CPH 22
5.3. PARTS LIST 24

Specifications for APH:

Specifications: / Model:	NN-P294SF/BF/WF APH	NN-H264SF/BF/WF/QF APH	NN-S254SF/BF/WF/BFB APH
Power Source:	120V AC Single Phase, 60Hz		
Power Requirement:	1250W	1250W	1250W
Output(IEC705-88):	1200W	1200W	1200W
Microwave Frequency:	*2450MHz		
Timer:	*99 min. 99 sec.		
Outside Dimensions:	*29 7/8"(759mm)(W) x 15"(381mm)(D) x 16 7/16"(418mm)(H)		
Oven Cavity Dimensions:	*23 1/4"(591mm)(W) x 14 7/16"(367mm)(D) x 9 1/2"(242mm)(H)		
Weight:	*55lbs. (25.0 kg)	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF		
Output power: IEC705-88 Test Procedure			
Specifications subject to change without notice.			

Specifications for CPH:

Specifications: / Model:	NN-P294SF/BF/WF CPH	NN-H264BF/WF/QF CPH	NN-S254WF CPH
Power Source:	120V AC Single Phase, 60Hz		
Power Requirement:	1250W	1250W	1250W
Output(IEC705-88):	1100W	1100W	1100W
Microwave Frequency:	*2450MHz		
Timer:	*99 min. 99 sec.		
Outside Dimensions:	*29 7/8"(759mm)(W) x 15"(381mm)(D) x 16 7/16"(418mm)(H)		
Oven Cavity Dimensions:	*23 1/4"(591mm)(W) x 14 7/16"(367mm)(D) x 9 1/2"(242mm)(H)		
Weight:	*55lbs. (25.0 kg)	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF		
Output power: IEC705-88 Test Procedure			
Specifications subject to change without notice.			

© 2004 Shanghai Matsushita Microwave Oven Co., Ltd. / All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Though this product has been manufactured in compliance with:
   "Federal Performance Standard 21 CFR Subchapter J"(D.H.H.S): U.S.A. models
   or "Radiation Emitting Devices Act"(Health and Welfare Canada): Canadian models
   it is very important all repairs should be made in accordance with procedures described in this manual to avoid being exposed to excessive microwave radiation.
3. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
4. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
5. Any serviceman who learns of any accident pertaining to microwave radiation leakage including the oven operating with open door should immediately notify the appropriate address listed below and Center for Devices and Radiological Health, DHHS.

IN U.S.A. (PASC)	Panasonic Services Company 50 Meadowland Parkway, Secaucus, New Jersey 07094 Attention: Technical Service Division. (201)348-7000	IN PUERTO RICO (PSC)	PSC San Gabriel Industrial Park 65th Infantry Ave. Km.9.5 Carolina, Puerto Rico 00985 (787)750-4300
		IN CANADA (PCI)	Panasonic Canada Inc. 5770 Ambler Drive, Mississauga, Ontario, L4W2T3 (905)624-5010

6. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(A) Do not operate or allow the oven to be operated with the door open.

(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
   (1) Interlock operation
   (2) Proper door closing
   (3) Seal and sealing surfaces (arcing, wear, and other damage)
   (4) Damage to or loosening of hinges and latches.
   (5) Evidence of dropping or abuse

(C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, waveguide or transmission line, and cavity for proper alignment, integrity and connections.

(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.

(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50-70˚F(30 - 40˚C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700± 20˚F (370 ± 10˚C).
- Pb free solder will tend to splash when heated too high (about 1100˚F/600˚C).

Panasonic®

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. NEW H.V.

IT HAS:
1. Very high voltage and high current circuits.
   It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.
2. Aluminum heat sink that is energized with very high voltage and high heat energy.
3. Very high voltage which may remain in circuitry even when oven is off. High voltage charge may remain in the capacitors on the board.

DO NOT:

* 1. Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage charge may remain in circuits.

* 2. Do not touch aluminum heat sink because it is energized with very high voltage and is also very hot in high heat energy.

* 3. Do not try to adjust or tamper with preset control on the Inverter board because it is very dangerous to adjust without proper test equipment.

* 4. Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.

* 5. For USA only:
   Do not try to repair Inverter PCB because it is very dangerous to repair. Replace as a complete High Voltage Inverter Circuit unit and return fully re-packed in original shipping box and shipping materials.

INVERTER POWER SUPPLY

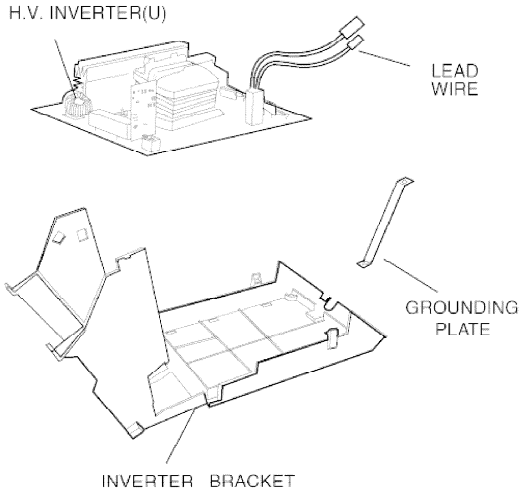

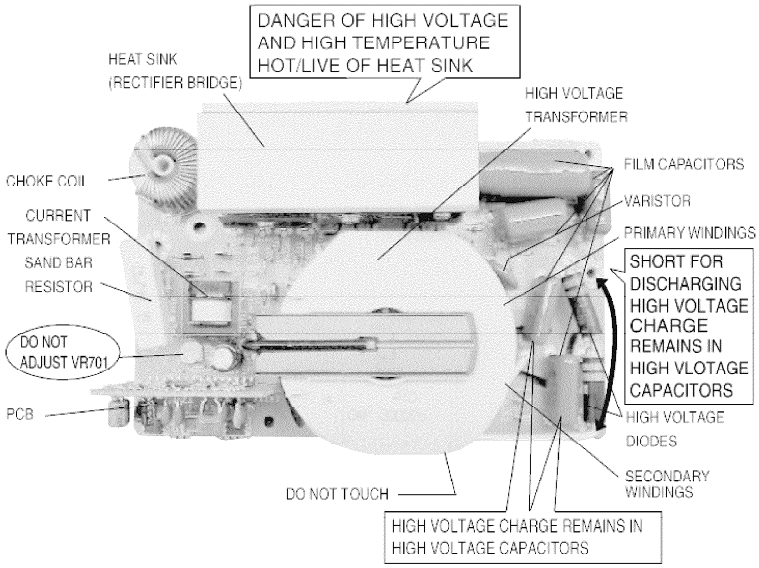

1. SCHEMATIC DIAGRAM

1.1. APH

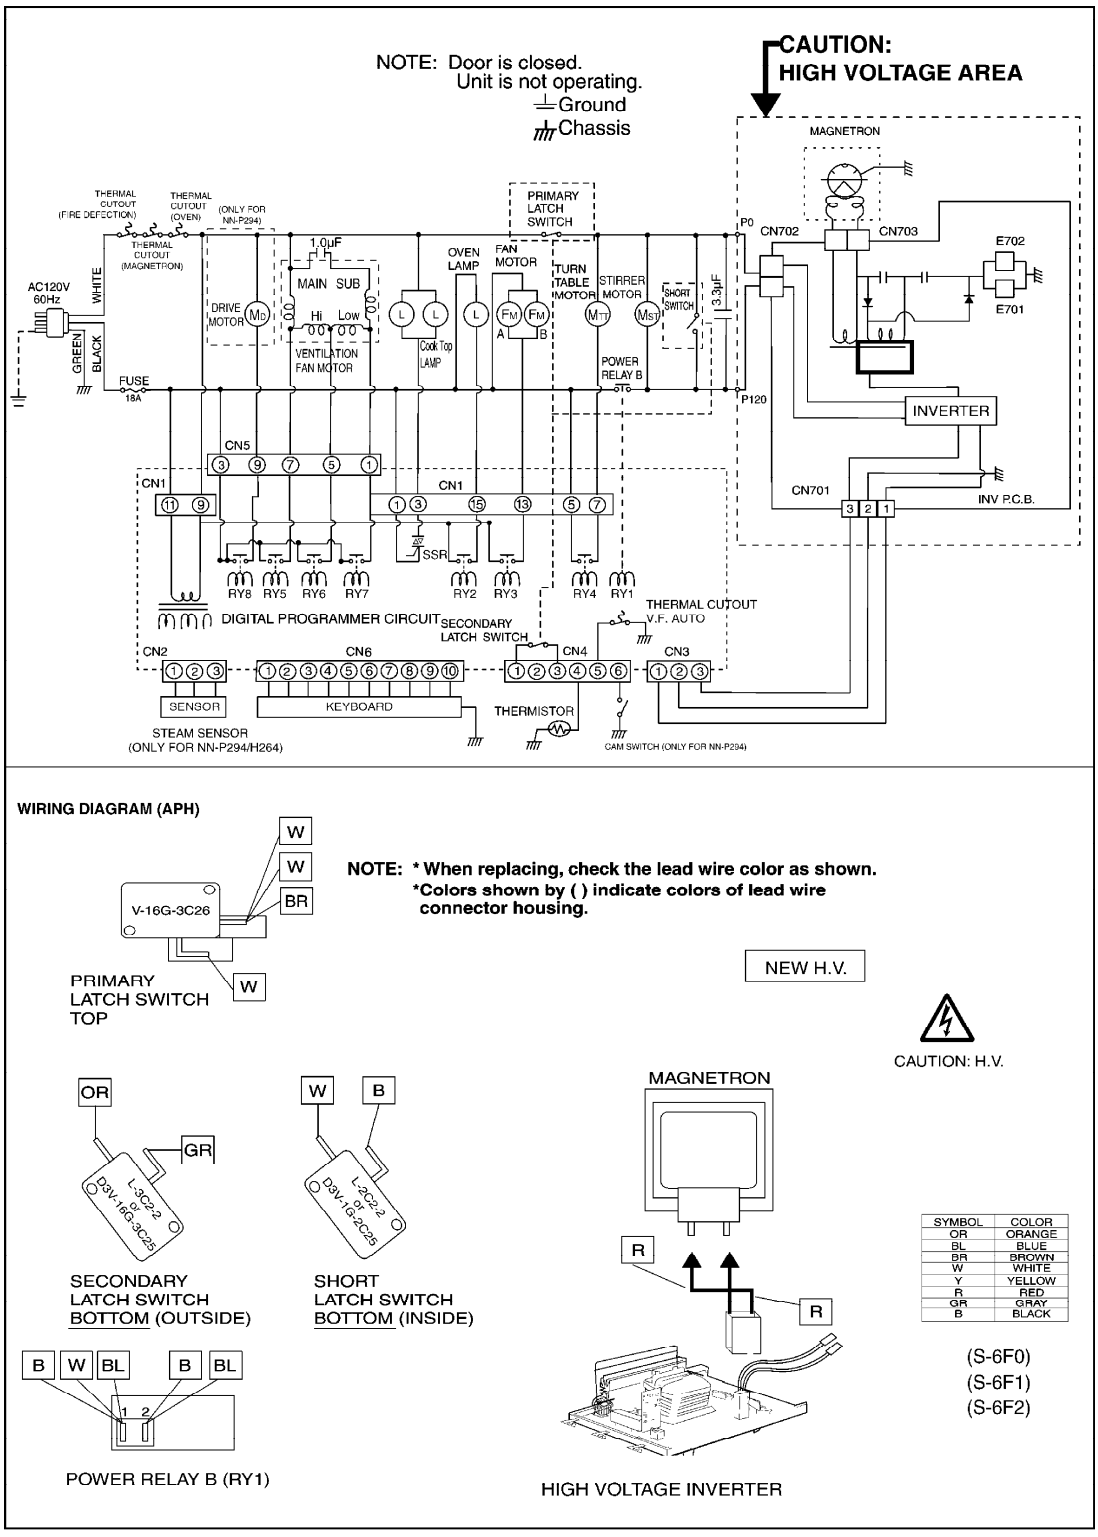

1.2. CPH

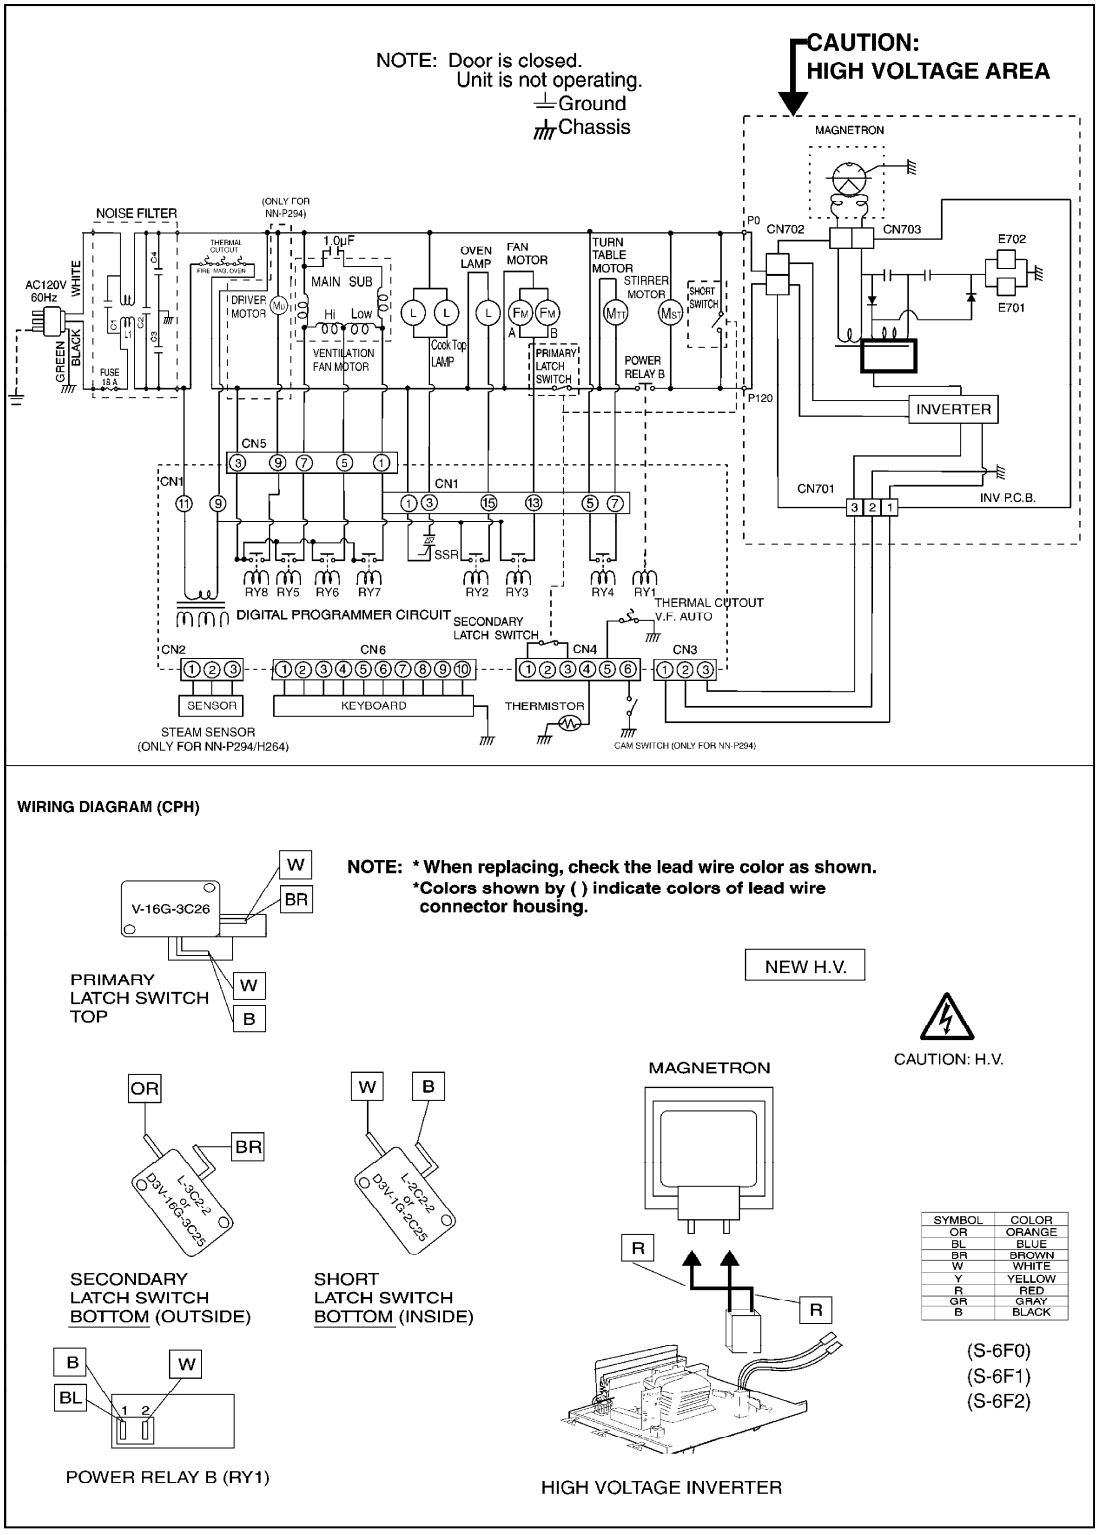

2. MEASUREMENTS AND ADJUSTMENTS

2.1. Adjustment of primary latch switch, door switch and short switch.

1. Mount the Primary latch switch, the door switch and the short switch to the door hook assembly as shown in ILL.

NOTE:

No specific individual adjustments during installation of the Primary latch switch, door switch or short switch to the door hook are required.

2. **When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of the arrows in the illustration, so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.**
3. **Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the component test procedures.**

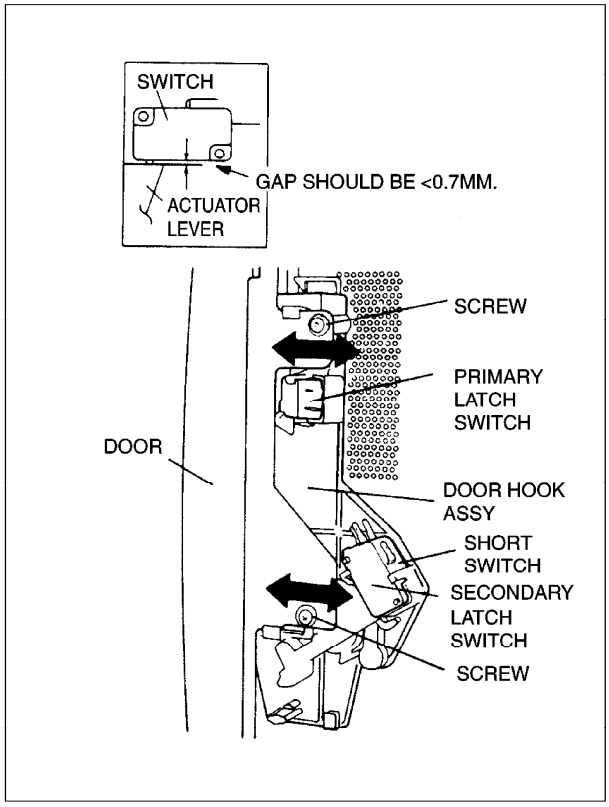

2.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However,due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

***1 liter beaker *Glass thermometer / *Wrist watch or stopwatch**

NOTE:

Check the line voltage under load.Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately

as possible.

1. Fill the beaker with exactly one liter of tap water.Stir the water using the thermometer and record the water's temperature. (recorded as T1).
2. Place the beaker on the center of glass tray. / Set the oven for High power and heat it for exactly one minute.
3. Stir the water again and read the temperature of the water. (recorded as T2).
4. The normal temperature rise at High power level for each model, is as shown in table.

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1100W(IEC705-88)	Min. 16.9°F(9.4°C)
1200W(IEC705-88)	Min. 18.5°F(10.3°C)

3. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm2 (1mW/cm2 for Canada) inform PASC, PSC, or PCI immediately. After repairing or replacing any radiation safety device, keep a written record for future reference, as required by D.H.H.S. and Health and Welfare Canada regulation. This requirement must be strictly observed. In addition, the leakage reading must be recorded on the service repair ticket while in the customer's home.

NOTE:

The U.S. Government standard is 5 mW/cm2 while in the customer's home. 2mW/cm2 stated here is our own voluntary standard. (1mW/cm2 for Canada)

3.1. Equipment

- Electromagnatic radiation monitor
- Glass thermometer 212°F or 100°C
- 600cc glass beaker

3.2. Procedure for measuring radiation leakage

Note before measuring.

- Do not exceed meter full scale deflection. Leakage monitor should

initially be set to the highest scale.

- To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area in Figure no faster than 1 inch/sec (2.5cm/sec).
- Leakage with the outer panel removed ..... less than 5mW/cm^2.
- Leakage for a fully assembled oven with door normally closed ..... less than 2mW/cm^2 (1mW/cm^2 for Canada).
- Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door ..... less than 2mW/cm^2.

1. Pour 275 ± 15cc (9ozs± 1/2oz) of 20°C ± 5°C (68° ± 9°F) water in a beaker which is graduated to 600cc, and place in the center of the oven.
2. Set the radiation monitor to 2450MHz and use it following the manufacturer's recommended test procedure to assure correct results.
3. When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.
4. Tap the start pad or set the timer and with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.

3.2.1. Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING
Avoid contacting any high voltage parts.

3.2.2. Measurements with a fully assembled oven.

After all components, including outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening and air inlet openings.

3.3. Record keeping and notification after measurement

- After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.
  A copy of this repair ticket and the microwave leakage reading should be kept by repair facility.
- Should the radiation leakage be more than 2 mW/cm^2 (1mW/cm for Canada) after determining that all parts are in good condition,

functioning properly, and genuine replacement parts as listed in this manual have been used, immediately notify PASC, PSC or PCI.

3.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

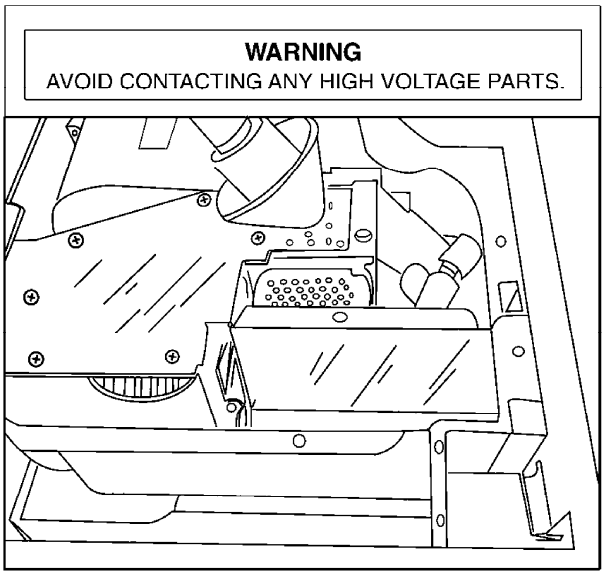

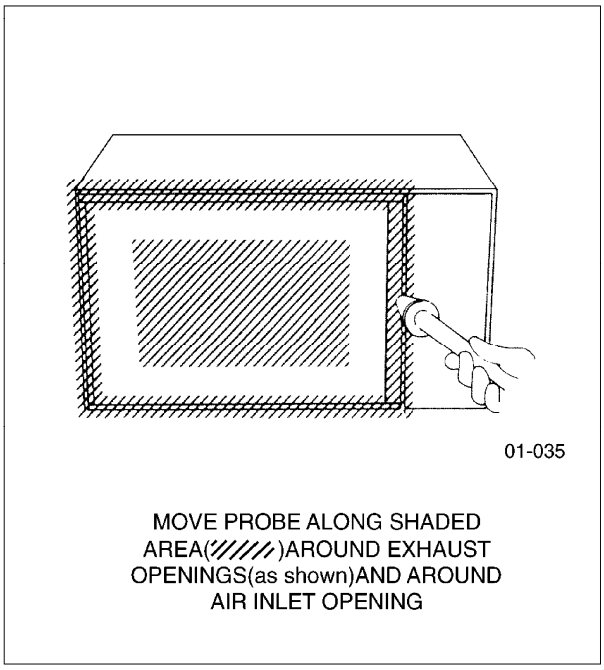

4. EXPLODED VIEW AND PARTS LIST

4.1. EXPLODED VIEW

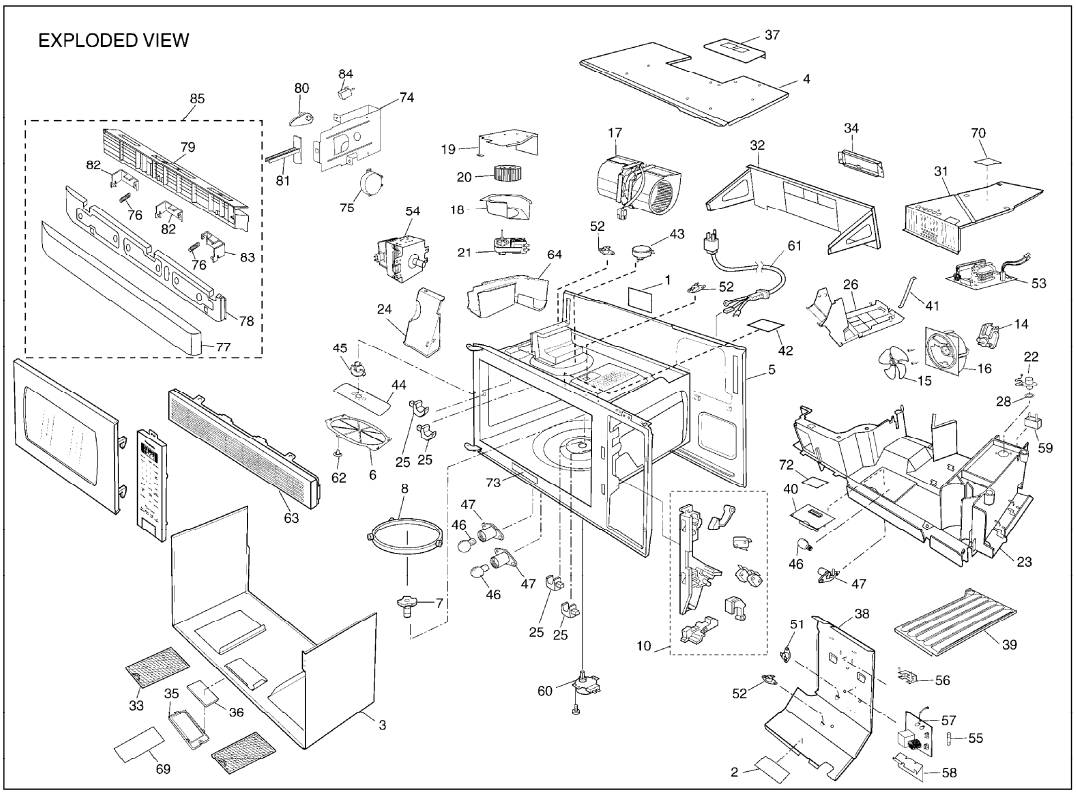

4.2. PARTS LIST

NOTE:

1. When ordering replacement part(s), please use part number(s) shown in this part list.
Do not use description of the part.

2. Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00205H00AP	CAUTION LABEL	1	APH
1		F00067600CP	CAUTION LABEL	1	CPH
2		F00335H00AP	FUSE LABEL	1	
3		F110D6F00SAP	CABINET BODY (U)	1	P294SF
3		F110D6F00BAP	CABINET BODY (U)	1	P294BF
3		F110D6F00HAP	CABINET BODY (U)	1	P294WF
3		F110D5H00SAP	CABINET BODY (U)	1	H264SF, S254SF
3		F110D5H10BAP	CABINET BODY (U)	1	H264BF, S254BF/BFB
3		F110D5H10HAP	CABINET BODY (U)	1	H264WF, S254WF
3		F110D5V20QAP	CABINET BODY (U)	1	H264QF
4		F100D5H00AP	BASE PLATE (U)	1	
5	⚠	F201A6F00AP	OVEN (U)	1	P294 APH/CPH, H264 APH/CPH
5	⚠	F201A6F20AP	OVEN (U)	1	S254 APH/CPH
6		F20115H00AP	COVER	1	
7		F21314Y00AP	PULLY SHAFT	1	
8		F290D5Q00AP	ROLLER RING (U)	1	
10	⚠	E393C8000BP	DOOR HOOK (U)	1	
14		F40015H00AP	FAN MOTOR A	1	FOR INVERTER (U) COOLING
15		F40085H00AP	FAN BLADE	1	FOR INVERTER (U) COOLING
16		F40255H00AP	ORIFICE	1	
17		F401W5H00AP	BLOWER MOTOR (U)	1	
18		F42485H00AP	FAN CASE C	1	
19		F41585H00AP	FAN INSTALLATION PLATE	1	
20		F42505H00AP	SIROCCO FAN C	1	
21		F42676F00AP	FAN MOTOR B	1	FOR MAGNETRON COOLING
22		F601L6F00AP	SENSOR (BU)	1	P294 APH/CPH
22		F601L5H00AP	SENSOR (BU)	1	H264 APH/CPH
23		F40246F00AP	EXHAUST GUIDE A	1	P294 APH/CPH
23		F40246F10AP	EXHAUST GUIDE A	1	H264 APH/CPH, S254 APH/CPH
24		F44775H00AP	EXHAUST GUIDE	1	
25		F20025H00AP	RACK SUPPORT	4	P294 APH/CPH, H264 APH/CPH
26		F65855H00AP	INVERTER BRACKET	1	
28		F62385H00AP	WASHER	1	P294 APH/CPH, H264 APH/CPH
31		F16035H00AP	TOP FRONT COVER	1	
32		F100T5H00AP	BACK PLATE (U)	1	
33		F400B5V10AP	FILTER (U)	2	
34		F400K5H00AP	EXHAUST ADAPTER	1	
35		F63176F00SAP	LAMP HOLDER	1	P294SF
35		F63176F00BAP	LAMP HOLDER	1	P294BF
35		F63176F00HAP	LAMP HOLDER	1	P294WF
35		F63175H00SAP	LAMP HOLDER	1	H264SF, S254SF
35		F63175H10BAP	LAMP HOLDER	1	H264BF, S254BF/BFB
35		F63175H10HAP	LAMP HOLDER	1	H264WF, S254WF
35		F63175V20QAP	LAMP HOLDER	1	H264QF
36		F64375H00AP	GLASS PLATE	1	
37		F41575H00AP	FAN CASE INSTALLATION PLATE	1	
38		F42175H00AP	COVER PLATE	1	
39		F42205H00AP	COVER PLATE B	1	
40		F607V5H00AP	LAMP COVER (U)	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
41		F61845H00AP	GROUNDING PLATE	1	
42		F60405H00AP	LAMP MEMBRANE	1	
43		F61446F00AP	STIRRER MOTOR	1	P294 APH/CPH
43		F61445H00AP	STIRRER MOTOR	1	H264 APH/CPH, S254 APH/CPH
44		F20155H00AP	STIRRER	1	
45		F20165H00AP	ANTENNA SUPPORT	1	
46		F60305H00AP	INCANDESCENT LAMP	3	
47		F61525H00AP	SOCKET	3	
51		F61456F00AP	THERMAL CUTOUT	1	
52		F61456N60AP	THERMAL CUTOUT	3	FOR MAGNETRON
53	⚠	A606Y4T00AP	H.V.INVERTER (U)	1	APH
53	⚠	A606Y4T00CP	H.V.INVERTER (U)	1	CPH
54	⚠	2M261-M32F	MAGNETRON	1	APH
54	⚠	2M261-M32G	MAGNETRON	1	CPH
55	⚠	B62308250AP	FUSE	1	18A/125V
56		F62315G10XN	FUSE HOLDER	1	APH
57		J692Y4T00CPR	NOISE FILTER (U)	1	CPH
58		F82605H00AP	NOISE FILTER BRACKET	1	CPH
59		F66985H00AP	MOTOR CAPACITOR	1	
60		F63266F00AP	TURNTABLE MOTOR	1	
61	⚠	F900C5H00AP	AC CORD W/PLUG	1	APH
61	⚠	F900C5H00CP	AC CORD W/PLUG	1	CPH
62		F90804W00AP	CANOE CLIP	1	FOR COVER
63		F101V5H00AP	VENT GRILLE (U)	1	H264SF, S254SF
63		F11196F10BAP	VENT GRILLE (U)	1	H264BF, S254BF/BFB
63		F11196F10HAP	VENT GRILLE (U)	1	H264WF, S254WF
63		F11196F10QAP	VENT GRILLE (U)	1	H264QF
64		F48435H00AP	INHALE GUIDE A	1	
69		F01725H00AP	CAUTION LABEL	1	
70		F00565H00AP	CAUTION LABEL	1	
72		F00725H00AP	CAUTION LABEL	1	
73		F03346F10CP	MENU LABEL	1	H264 CPH
73		F03346F20CP	MENU LABEL	1	S254 CPH
74		F66396F00AP	MOTOR INSTALLATION BRACKET	1	P294 APH/CPH
75		F63266F00AP	DRIVE MOTOR	1	P294 APH/CPH
76		F11736F00AP	SPRING	2	P294 APH/CPH
77		F11196F00SAP	VENT GRILLE OSTENTATIOUS COVER	1	P294SF APH/CPH
77		F11196F00BAP	VENT GRILLE OSTENTATIOUS COVER	1	P294BF APH/CPH
77		F11196F00HAP	VENT GRILLE OSTENTATIOUS COVER	1	P294WF APH/CPH
78		F11206F00AP	VENT GRILLE INSTALLATION BRACKET	1	P294 APH/CPH
79		F11176F00SAP	VENT GRILLE	1	P294SF
79		F11176F00BAP	VENT GRILLE	1	P294BF
79		F11176F00HAP	VENT GRILLE	1	P294WF
80		F48236F00AP	CAM	1	P294 APH/CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
81		F48246F00AP	SHAFT	1	P294 APH/CPH
82		F111B6F00AP	BACKSTOP AU	2	P294 APH/CPH
83		F111C6F00AP	BACKSTOP BU	1	P294 APH/CPH
84		J61424T00AP	MICRO SWITCH	1	P294 APH/CPH
85		F101V6F00SAP	VENT GRILLE (U)	1	P294SF
85		F101V6F00BAP	VENT GRILLE (U)	1	P294BF
85		F101V6F00HAP	VENT GRILLE (U)	1	P294WF

4.3. DOOR ASSEMBLY

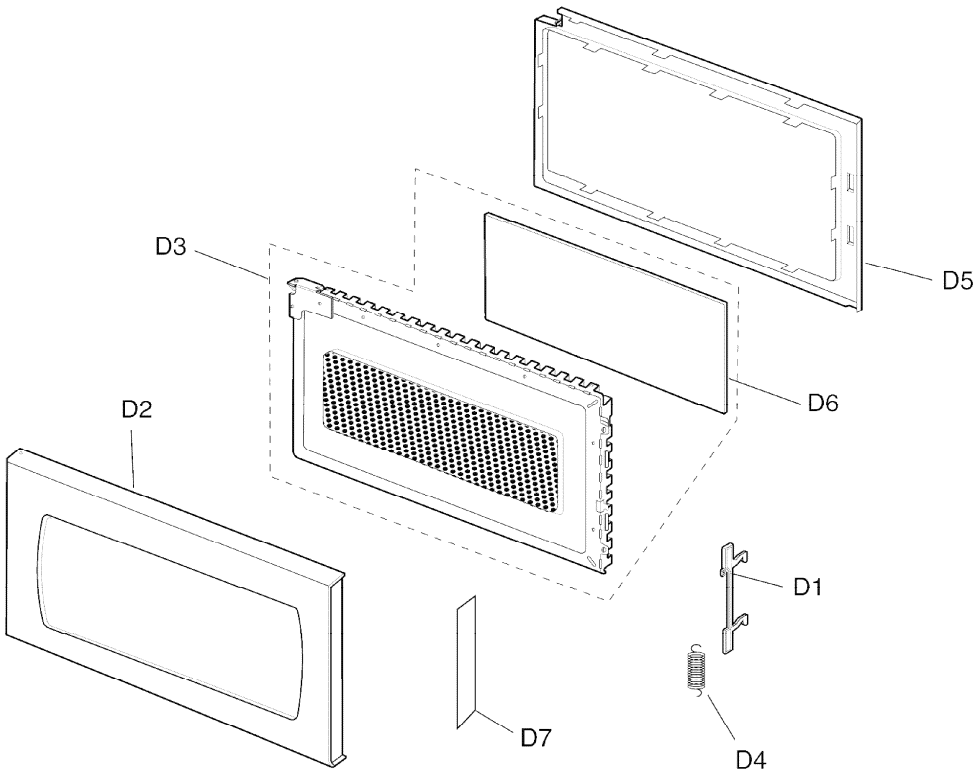

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F3018-1200	DOOR KEY A	1	
D2	⚠	F302A6F00SAP	DOOR A (U)	1	P294SF
D2	⚠	F302A6F00BAP	DOOR A (U)	1	P294BF
D2	⚠	F302A6F00HAP	DOOR A (U)	1	P294WF
D2	⚠	F302A5V10SAP	DOOR A (U)	1	H264SF
D2	⚠	F302A5V20BAP	DOOR A (U)	1	H264BF
D2	⚠	F302A5V20HAP	DOOR A (U)	1	H264WF
D2	⚠	F302A5V20QAP	DOOR A (U)	1	H264QF
D2	⚠	F302A6F20SAP	DOOR A (U)	1	S254SF
D2	⚠	F302A6F20BAP	DOOR A (U)	1	S254BF/BFB
D2	⚠	F302A6F20HAP	DOOR A (U)	1	S254WF
D3	⚠	F302K5H00AP	DOOR E (U)	1	
D4		F30214000AP	DOOR KEY SPRING	1	
D5	⚠	F30855H00AP	DOOR C	1	
D6	⚠	F31455H00AP	DOOR SCREEN A	1	
D7		F02459660AP	DHHS LABEL	1	APH
D7		F04114180CP	DHHS LABEL	1	CPH

4.4. WIRING MATERIALS

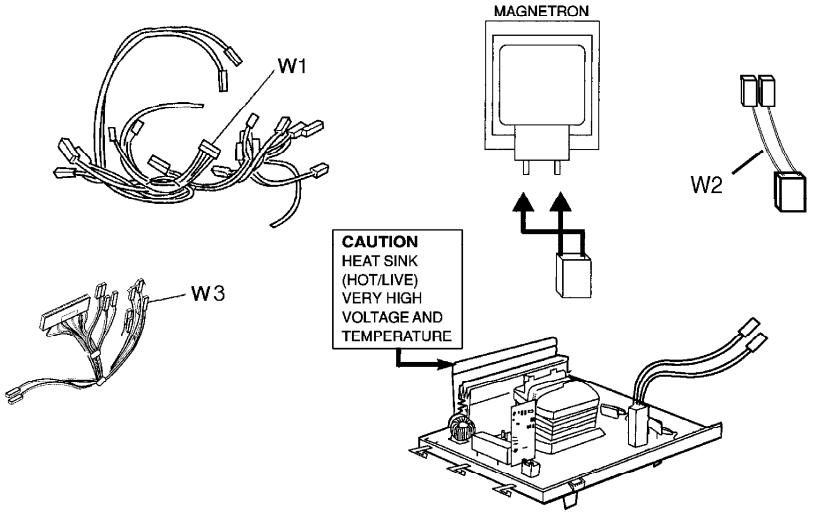

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
W1		F030A6F00AP	LEAD WIRE HARNESS	1	P294 APH
W1		F030A6F00CP	LEAD WIRE HARNESS	1	P294 CPH
W1		F030A5H00AP	LEAD WIRE HARNESS	1	H264 APH, S254 APH
W1		F030A5H00CP	LEAD WIRE HARNESS	1	H264 CPH, S254 CPH
W2		F030E5H00AP	H.V.LEAD WIRE	1	APH
W2		F030E5H00CP	H.V.LEAD WIRE	1	CPH
W3		F03536F00AP	LEAD WIRE HARNESS U	1	P294 APH/CPH / (INCLUDING CABEL CONNECTOR CN4)
W3		F03535H00AP	LEAD WIRE HARNESS U	1	H264 APH/CPH, S254 APH/CPH / (INCLUDING CABEL CONNECTOR CN4)

4.5. ESCUTCHEON BASE ASSEMBLY

4.5.1. NN-P294

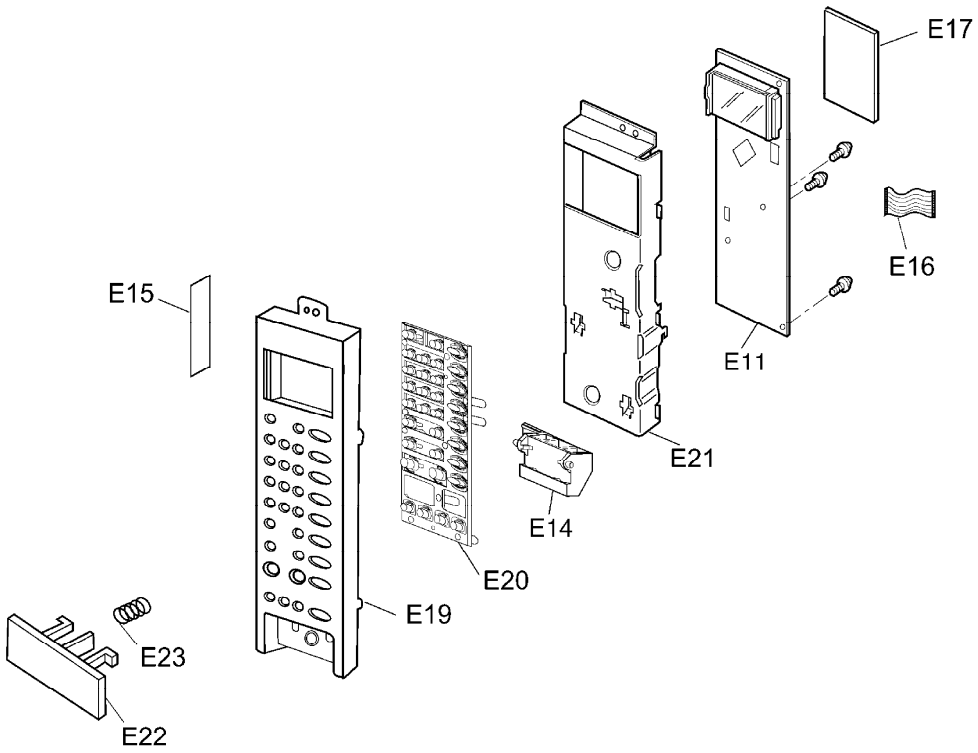

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E11		F603L6F00AP	D.P.CIRCUIT (AU)	1	P294 APH
E11		F603L6F00CP	D.P.CIRCUIT (AU)	1	P294 CPH
E14		F82566F00AP	DOOR OPENING LEVEL	1	P294 APH/CPH
E15		F00076F00SAP	NAME PLATE	1	P294SF APH
E15		F00076F00BAP	NAME PLATE	1	P294BF APH
E15		F00076F00HAP	NAME PLATE	1	P294WF APH
E15		F00076F00SCP	NAME PLATE	1	P294SF CPH
E15		F00076F00BCP	NAME PLATE	1	P294BF CPH
E15		F00076F00HCP	NAME PLATE	1	P294WF CPH
E16		F66166F00AP	FLAT CABLE	1	P294 APH/CPH
E17		F603Y6F00AP	D.P.CIRCUIT (DU)	1	P294 APH
E17		F603Y6F00CP	D.P.CIRCUIT (DU)	1	P294 CPH
E19		F800L6F00SAP	CONTROL PANEL (U)	1	P294SF APH
E19		F800L6F00BAP	CONTROL PANEL (U)	1	P294BF APH
E19		F800L6F00HAP	CONTROL PANEL (U)	1	P294WF APH
E19		F800L6F00SCP	CONTROL PANEL (U)	1	P294SF CPH
E19		F800L6F00BCP	CONTROL PANEL (U)	1	P294BF CPH
E19		F800L6F00HCP	CONTROL PANEL (U)	1	P294WF CPH
E20		F82986F00SAP	BUTTON	1	P294SF
E20		F82986F00BAP	BUTTON	1	P294BF
E20		F82986F00HAP	BUTTON	1	P294WF
E21		F81276F00AP	BACK PANEL	1	P294 APH/CPH
E22		F891P6F00SAP	DOOR OPENING BUTTON	1	P294SF

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E22		F891P6F00BAP	DOOR OPENING BUTTON	1	P294BF
E22		F891P6F00HAP	DOOR OPENING BUTTON	1	P294WF
E23		F80375950AP	COOK BUTTON SPRING	1	P294 APH/CPH

4.5.2. NN-H264, NN-S254

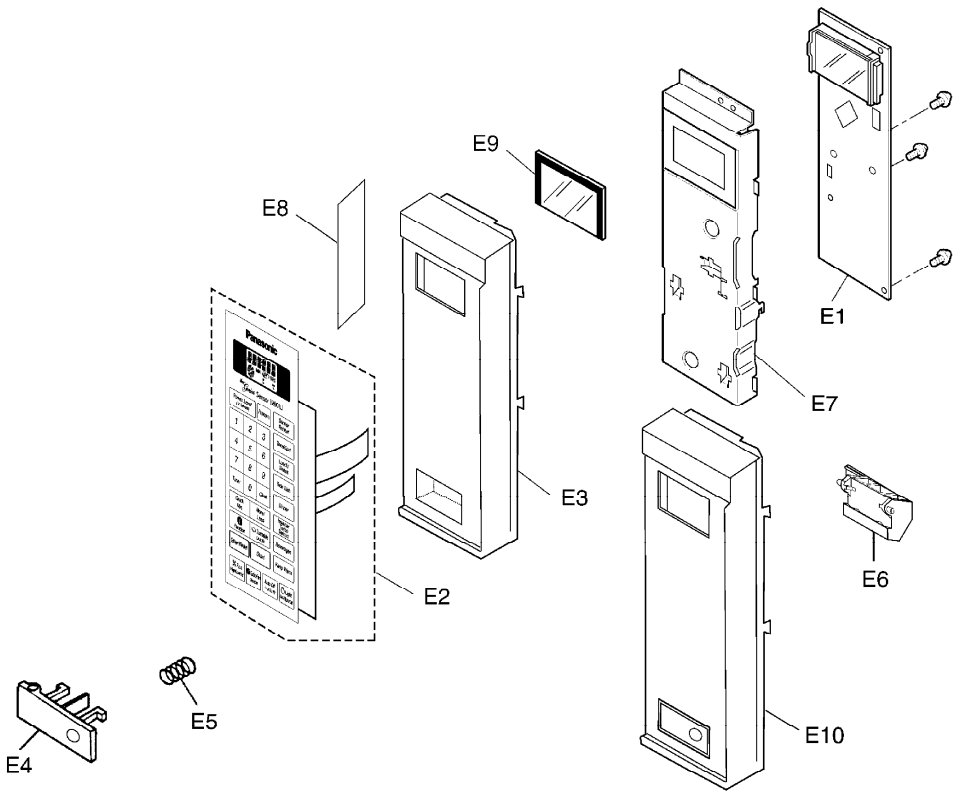

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E1		F603L5V10AP	D.P.CIRCUIT	1	H264 APH
E1		F603L5V30AP	D.P.CIRCUIT	1	S254 APH
E1		F603L5V10CP	D.P.CIRCUIT	1	H264 CPH
E1		F603L5V30CP	D.P.CIRCUIT	1	S254 CPH
E2		F630Y6F10BAP	MEMBRANE SWITCH (U)	1	H264SF/BF APH
E2		F630Y6F10HAP	MEMBRANE SWITCH (U)	1	H264WF APH
E2		F630Y6F10QAP	MEMBRANE SWITCH (U)	1	H264QF APH
E2		F630Y6F20BAP	MEMBRANE SWITCH (U)	1	S254SF/BF/BFB APH
E2		F630Y6F20HAP	MEMBRANE SWITCH (U)	1	S254WF APH
E2		F630Y6F10BCP	MEMBRANE SWITCH (U)	1	H264BF CPH
E2		F630Y6F10HCP	MEMBRANE SWITCH (U)	1	H264WF CPH
E2		F630Y6F10QCP	MEMBRANE SWITCH (U)	1	H264QF CPH
E2		F630Y6F20HCP	MEMBRANE SWITCH (U)	1	S254WF CPH
E3		F80345H10BAP	ESCUTCHEON BASE	1	H264BF, S254BF/BFB
E3		F80345H10HAP	ESCUTCHEON BASE	1	H264WF, S254WF
E3		F80345V20QAP	ESCUTCHEON BASE	1	H264QF
E4		F80725H00SAP	DOOR OPENING BUTTON	1	H264SF, S254SF
E4		F80725H10BAP	DOOR OPENING BUTTON	1	H264BF, S254BF/BFB
E4		F80725H10HAP	DOOR OPENING BUTTON	1	H264WF, S254WF
E4		F80725V20QAP	DOOR OPENING BUTTON	1	H264QF
E5		F80375950AP	OPENING BUTTON SPRING	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E6		F82565H00AP	DOOR OPENING LEVEL	1	
E7		F81275H00AP	BACK PLATE	1	
E8		F00076F10SAP	NAME PLATE	1	H264SF APH
E8		F00076F10BAP	NAME PLATE	1	H264BF APH
E8		F00076F10HAP	NAME PLATE	1	H264WF APH
E8		F00076F10QAP	NAME PLATE	1	H264QF APH
E8		F00076F20SAP	NAME PLATE	1	S254SF APH
E8		F00076F20BAP	NAME PLATE	1	S254BF/BFB APH
E8		F00076F20HAP	NAME PLATE	1	S254WF APH
E8		F00076F10BCP	NAME PLATE	1	H264BF CPH
E8		F00076F10HCP	NAME PLATE	1	H264WF CPH
E8		F00076F10QCP	NAME PLATE	1	H264QF CPH
E8		F00076F20HCP	NAME PLATE	1	S254WF CPH
E9		F80025H00AP	ESCUTCHEON B	1	
E10		F800L5H00AP	ESCUTCHEON BASE (U)	1	H264SF, S254SF

4.6. PACKING AND ACCESSORIES

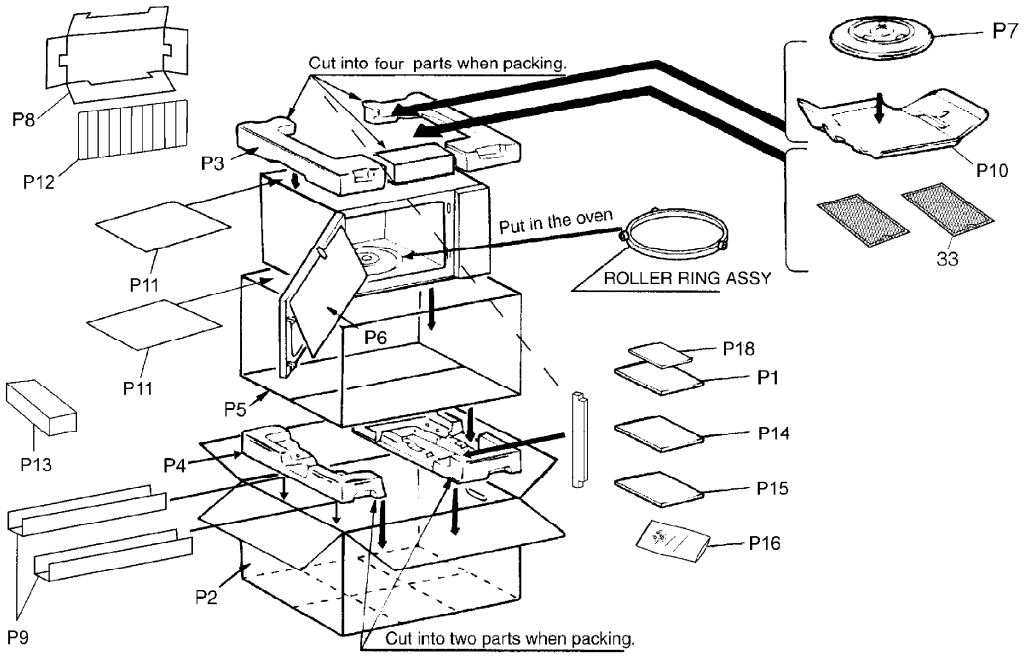

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
P1		F00036F00AP	INSTRUCTION MANUAL	1	P294 APH
P1		F00036F00CP	INSTRUCTION MANUAL	1	P294 CPH
P1		F00036F10AP	INSTRUCTION MANUAL	1	H264 APH, S254 APH
P1		F00036F10CP	INSTRUCTION MANUAL	1	H264 CPH, S254 CPH
P2		F01026F00SAP	PACKING CASE, PAPER	1	P294SF APH
P2		F01026F00BAP	PACKING CASE, PAPER	1	P294BF APH
P2		F01026F00HAP	PACKING CASE, PAPER	1	P294WF APH
P2		F01026F00SCP	PACKING CASE, PAPER	1	P294SF CPH
P2		F01026F00BCP	PACKING CASE, PAPER	1	P294BF CPH
P2		F01026F00HCP	PACKING CASE, PAPER	1	P294WF CPH
P2		F01026F10SAP	PACKING CASE, PAPER	1	H264SF APH
P2		F01026F10BAP	PACKING CASE, PAPER	1	H264BF APH
P2		F01026F10HAP	PACKING CASE, PAPER	1	H264WF APH
P2		F01026F10QAP	PACKING CASE, PAPER	1	H264QF APH
P2		F01026F20SAP	PACKING CASE, PAPER	1	S254SF APH
P2		F01026F20BAP	PACKING CASE, PAPER	1	S254BF/BFB APH
P2		F01026F20HAP	PACKING CASE, PAPER	1	S254WF APH
P2		F01026F10BCP	PACKING CASE, PAPER	1	H264BF CPH
P2		F01026F10HCP	PACKING CASE, PAPER	1	H264WF CPH
P2		F01026F10QCP	PACKING CASE, PAPER	1	H264QF CPH
P2		F01026F20HCP	PACKING CASE, PAPER	1	S254WF CPH
P3		F01045H00AP	UPPER FILLER	1	
P4		F01055H00AP	LOWER FILLER	1	
P5		F01065H00AP	P.E.BAG	1	
P6		F01075H00AP	DOOR SHEET	1	
P7		A06015H00AP	COOKING TRAY	1	
P8		F01175H00AP	TRAY PACKING B	1	P294 APH/CPH, H264 APH/CPH
P9		F01485H00AP	REINFORCE BRACKET	2	
P10		F01085H00AP	TRAY PACKING	1	
P11		F01925H00AP	SHEET	2	
P12		F06025H00AP	OVEN RACK	1	P294 APH/CPH, H264 APH/CPH
P13		F02185H00AP	PROTECTOR PACKING	1	
P14		F03136F10AP	INSTALLATION INSTRUCTION	1	APH
P14		F03136F10CP	INSTALLATION INSTRUCTION	1	CPH
P15		F04315H00AP	UPPER-CABINET TEMPLATE	1	APH
P15		F04315H00CP	UPPER-CABINET TEMPLATE	1	CPH
P16		F011F5H00AP	ATTACHMENT	1	
P18		F04845V10AP	FILTER PURCHASE NOTICE	1	APH
P18		F04845V10AP	FILTER PURCHASE NOTICE	1	CPH
33		F400B5V10AP	FILTER (U)	2	

5. DIGITAL PROGRAMMER CIRCUIT

5.1. NN-P294 APH/CPH

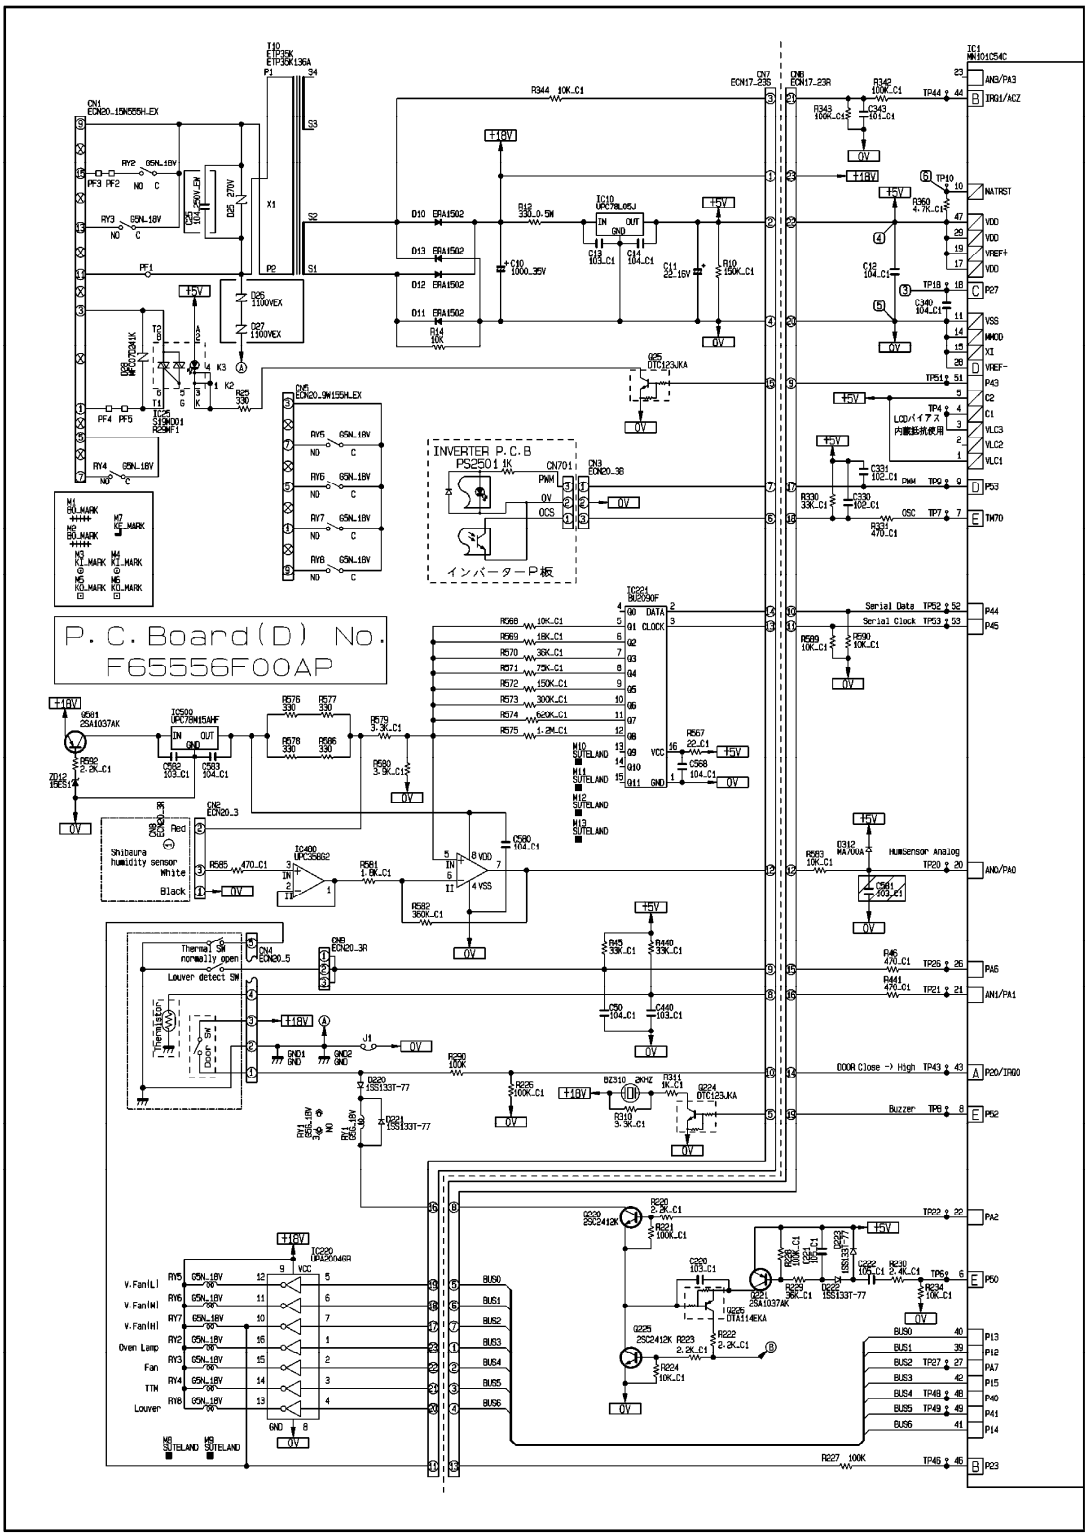
P. C. Board (D) No.
F65556F00AP
INVERTER P.C.B
PS2501
インバーター P.C.B
Shibaura
Humidity sensor
White
Black
Thermal SW
normally open
Louver detect SW
Thermistor
Door SW
Humsensor Analog
Serial Data
Serial Clock
DOOR Close -) High
Buzzer
LCDバイアス
内蔵抵抗使用
V.Fan(L)
V.Fan(M)
V.Fan(H)
Oven Lamp
Fan
TTN
Louver

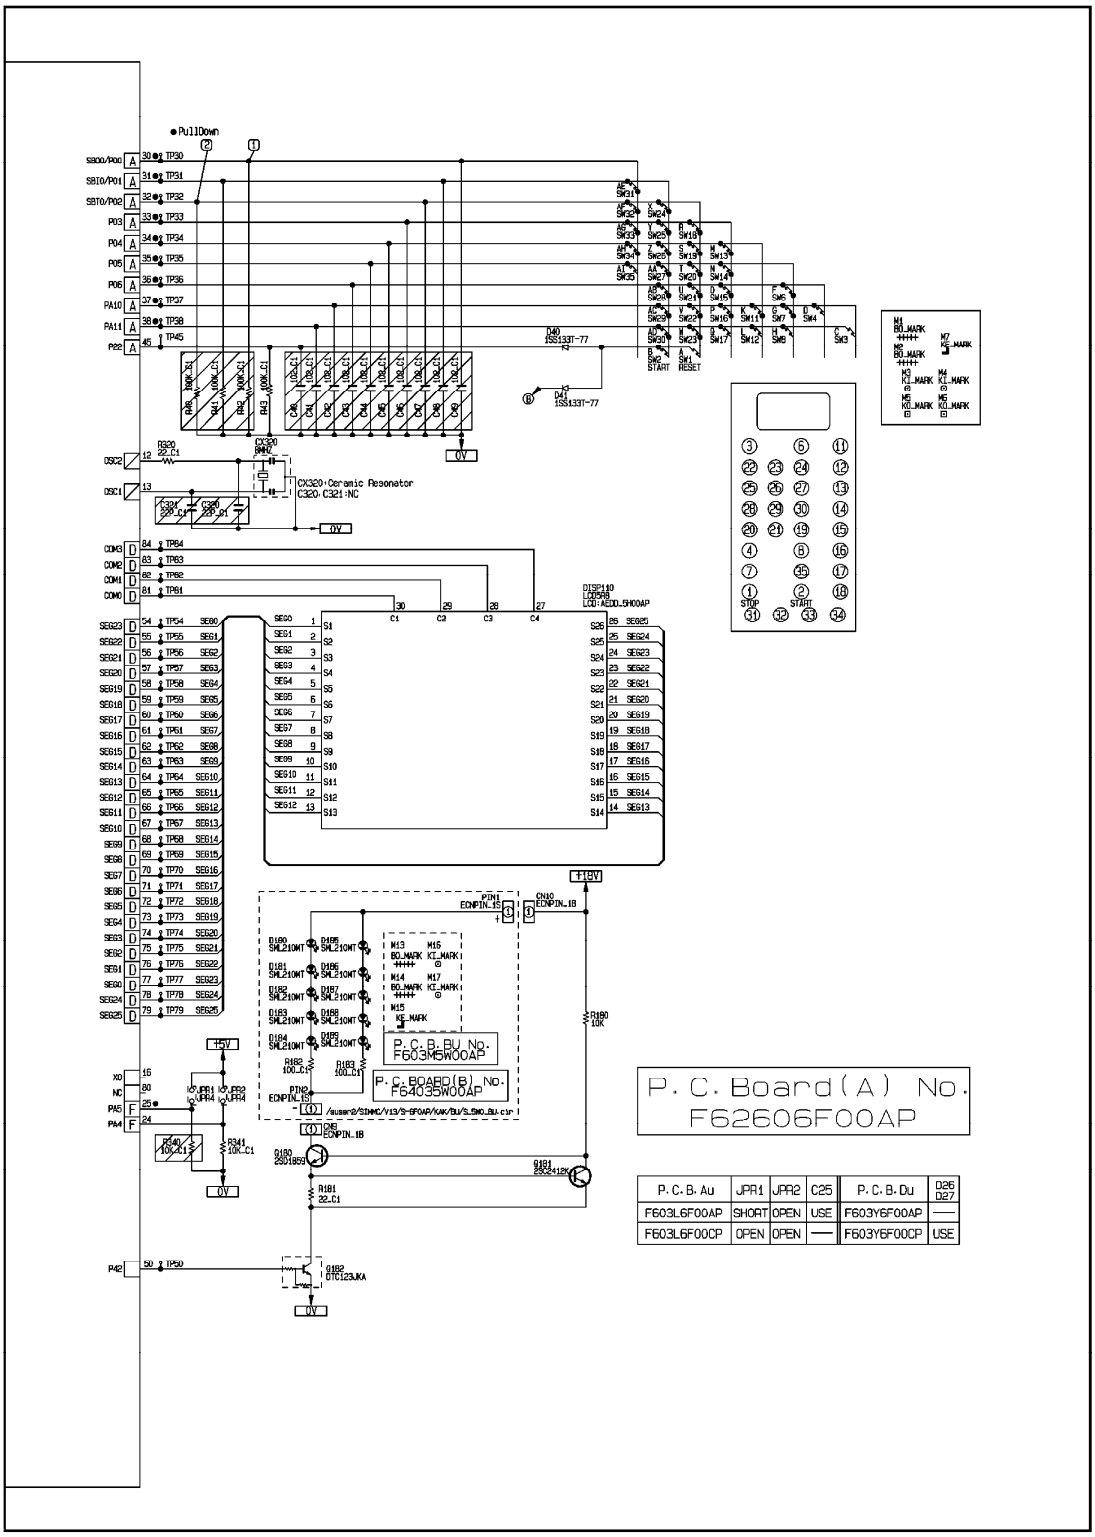

5.2. NN-H264 APH/CPH, NN-S254 APH/CPH

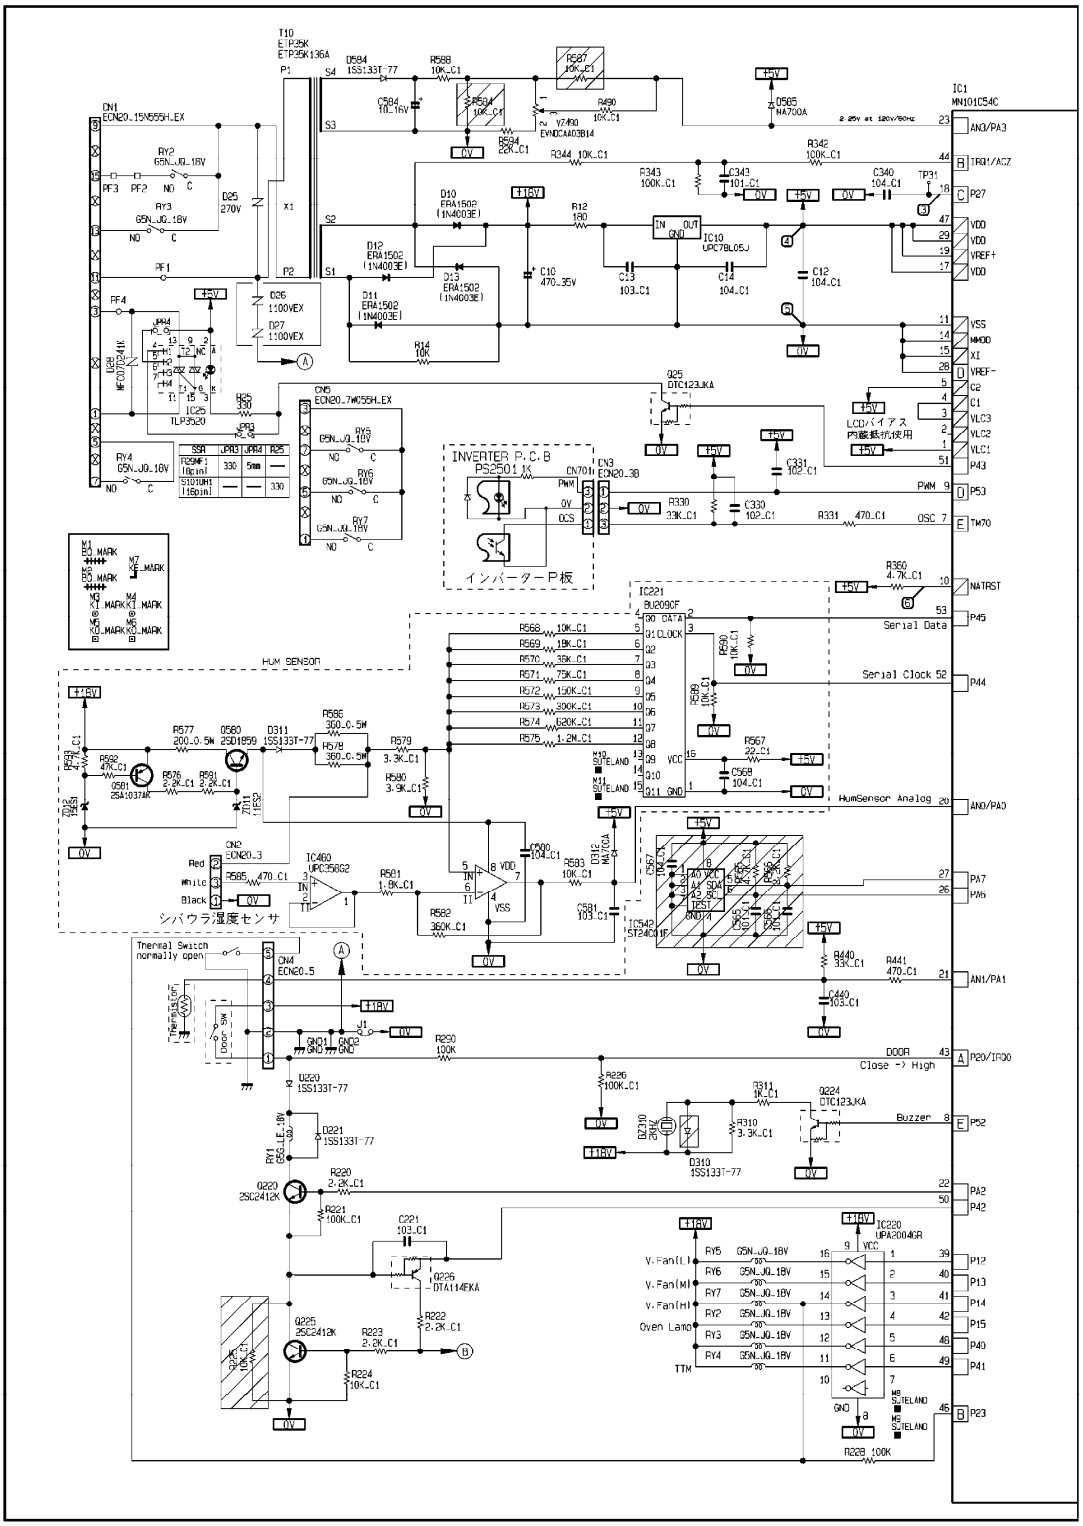
IC1
MN101C54C
INVERTER P.C.B
PS2501.1K
インバーターP板
HUM SENSOR
シバウラ湿度センサ
Thermal Switch
normally open
Serial Data
Serial Clock
HumSensor Analog
DOOR
Close -> High
Buzzer
V.Fan(L)
V.Fan(M)
V.Fan(H)
Oven Lamp
TTM
LCDバイアス
PS極低抗使用

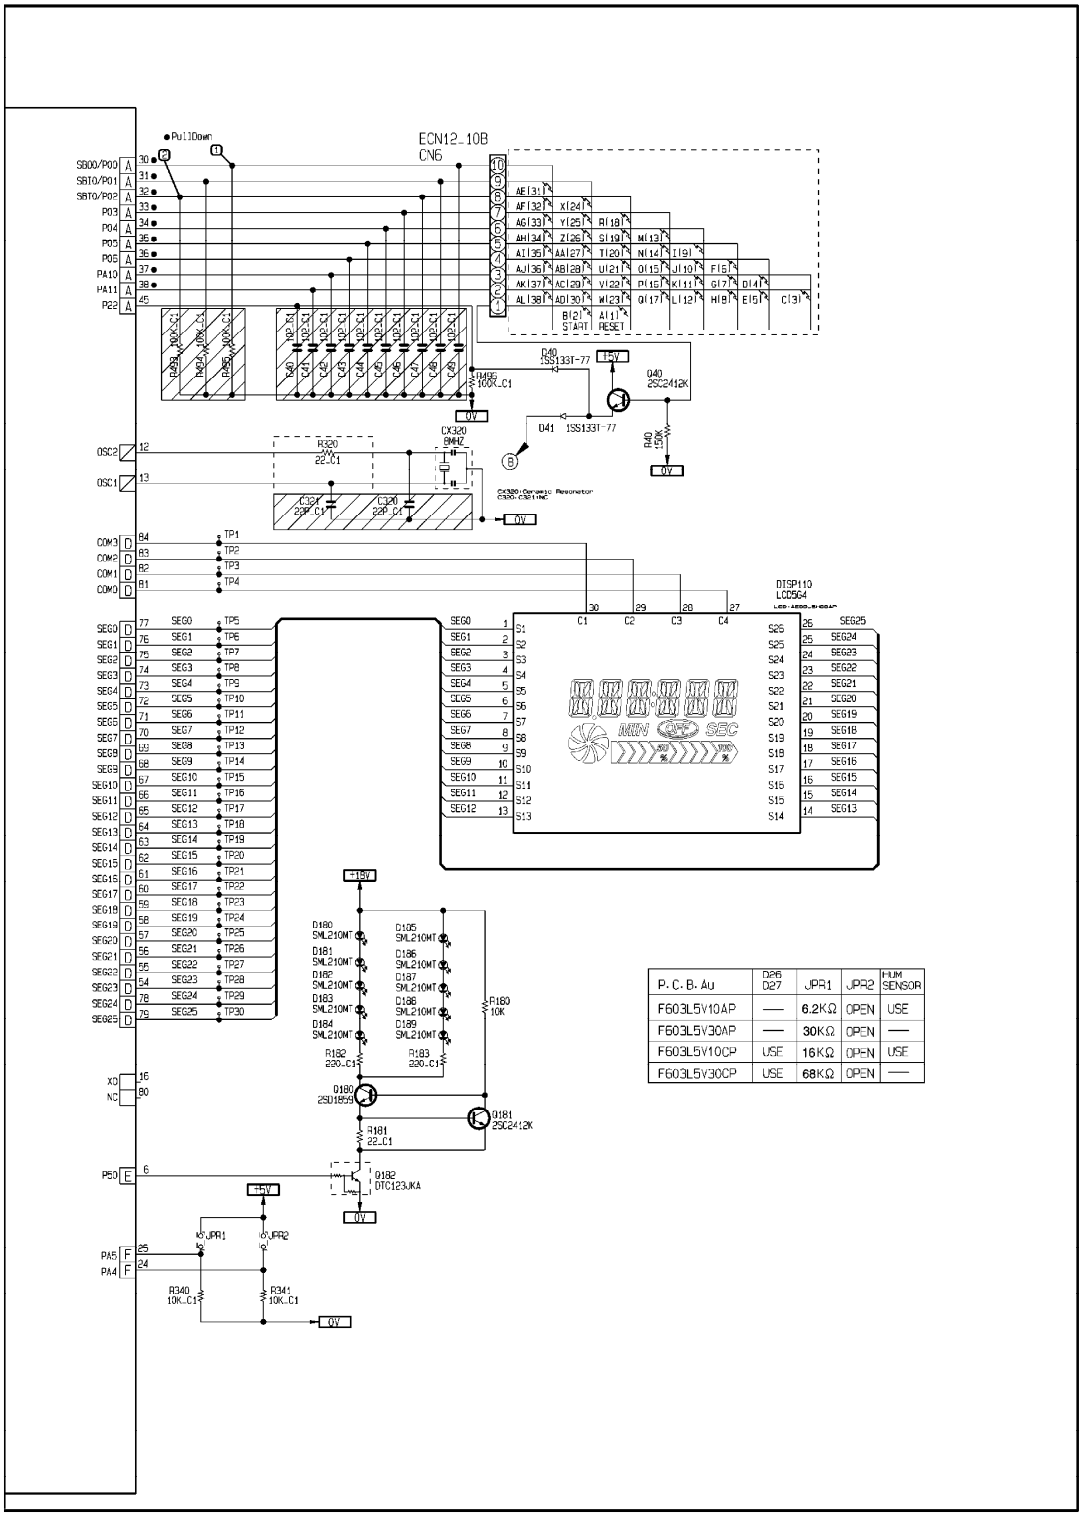

P.C.B. Au	D26 D27	JPR1	JPR2	HUM SENSOR
F603L5V10AP	—	6.2KΩ	OPEN	USE
F603L5V30AP	—	30KΩ	OPEN	—
F603L5V10CP	USE	16KΩ	OPEN	USE
F603L5V30CP	USE	68KΩ	OPEN	—

5.3. PARTS LIST

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310		AEFBAT2001	BUZZER	1	2.0KHz
C221,C222		AECUN06F105Z	CHIP CAPACITOR	2	1 μ F/10V (P294 APH/CPH)
C13,C440		AECUU06F103Z	CHIP CAPACITOR	2	0.01 μ F/50V
C220		AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V (P294 APH/CPH)
C582		AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V / (P294 APH/CPH,H264 APH/CPH)
C221		AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V / (H264 APH/CPH,S254 APH/CPH)
C343		AECUU06C101J	CHIP CAPACITOR	1	100PF/50V
C12,C14,C340		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V
C568,C580,C583		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V / (P294 APH/CPH,H264 APH/CPH)
C223		AECUT06F104Z	CHIP CAPACITOR	1	0.1 μ F/25V (P294 APH/CPH)
C50		AECUT06F104Z	CHIP CAPACITOR	1	0.1 μ F/25V (P294 APH/CPH)
C330,C331		AECUU06R102K	CHIP CAPACITOR	2	1000PF/50V
C567		AECUU06R102K	CHIP CAPACITOR	1	1000PF/50V (P294 APH/CPH)
C10		AECETK1V102B	AL CHEM CAPACITOR	1	1000 μ F/35V
C10		AECETK1V471B	AL CHEM CAPACITOR	1	470 μ F/35V (S254APH/CPH)
C11		AECETS1C220B	AL CHEM CAPACITOR	1	22 μ F/16V (P294 APH/CPH)
C584		AECETS1C100B	AL CHEM CAPACITOR	1	10 μ F/16V / (H264 APH/CPH,S254 APH/CPH)
C25		ECQU2A104MNA	CAPACITOR	1	0.1 μ F/250V (APH)
PIN1,PIN2		AEPINIPS-1E7	PIN	2	(P294 APH/CPH)
CN1		AEEMXH55515W	CONNECTOR	1	15 Pin
CN2		AEEMXH00703W	CONNECTOR	1	3 Pin (P294 APH/CPH,H264 APH/CPH)
CN3		AEEMXH00703B	CONNECTOR	1	3 Pin
CN4		AEEMXH01F05W	CONNECTOR	1	5 Pin
CN5		AEEMXH15509W	CONNECTOR	1	9 Pin (P294 APH/CPH)
CN5		AEEMXH05507W	CONNECTOR	1	7 Pin (H264 APH/CPH,S254 APH/CPH)
CN6		AEEM10FDZBTM	CONNECTOR	1	10 Pin (H264 APH/CPH,S254 APH/CPH)
CN7		AEEM9604S23C	CONNECTOR	1	23 Pin (P294 APH/CPH)
CN8		AEEM9604S23F	CONNECTOR	1	23 Pin (P294 APH/CPH)
CN9		AEEMXH00703R	CONNECTOR	1	3 Pin (P294 APH/CPH)
		F66175W00AP	LCD HOLDER	1	(P294 APH/CPH)
		F66175E40XN	LCD HOLDER	1	(H264 APH/CPH,S254 APH/CPH)
		F67525E40XN	DIFFUSION SHEET	1	
DISP110		AEDDHJ6F00AP	LCD	1	(P294 APH/CPH)
DISP110		AEDDHJ5H00AP	LCD	1	(H264 APH/CPH,S254 APH/CPH)
CX320		AEFOS800MG06	CERAMIC RESONATOR	1	8.0MHz
D10-D13		AESSRCT1A6-E	DIODE	4	(H264 APH/CPH,S254 APH/CPH)
D41,D220,D221		AESS133T-77	DIODE	3	
D222,D223		AESS133T-77	DIODE	2	(P294 APH/CPH)
D40,D584		AESS133T-77	DIODE	2	(H264 APH/CPH,S254 APH/CPH)
D585		AEDNRB721Q	DIODE	1	(H264 APH/CPH,S254 APH/CPH)
D312		AEDNRB721Q	DIODE	1	(P294 APH/CPH,H264 APH/CPH)
D25		AERZ271KD10A	VARSITOR	1	
D26,D27		AERZ102KD10A	VARSITOR	2	(CPH)
D28		AER241KD07A	ZENER DIODE	1	
D180-D189		AESQPY1112H	CHIP-LED	10	
IC1		MN101C54CFW	L.S.I.	1	(P294 APH/CPH)
IC1		MN101C54CEN	L.S.I.	1	(H264 APH/CPH,S254 APH/CPH)
IC220		AEICU2004GR	IC	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
IC480		AEICUPC358G2	IC	1	(P294 APH/CPH,H264 APH/CPH)
IC25		AEICR29MF1	IC	1	
IC10		AEIC78L05J-T	IC	1	
IC221		AEICBU2090F	IC	1	(P294 APH/CPH,H264 APH/CPH)
IC500		AEIC78M15AHF	IC	1	(P294 APH/CPH,H264 APH/CPH)
Q226		AESA14EKE	CHIP DIGI-TRANSISTOR	1	
Q25,Q182,Q224		AESC23JKE	CHIP DIGI-TRANSISTOR	3	
Q180		2SD1859TV2Q	TRANSISTOR	1	
Q221		2SA1037AK	TRANSISTOR	1	(P294 APH/CPH)
Q581		2SA1037AK	TRANSISTOR	1	(P294 APH/CPH,H264 APH/CPH)
Q181,Q220,Q225		2SC2412KT146	CHIP TRANSISTOR	3	
Q40		2SC2412KT146	CHIP TRANSISTOR	1	(H264 APH/CPH,S254 APH/CPH)
R182,R183		AERJ06J101R	CHIP RESISTOR	1	100 Ω,1/16W,5% (P294 APH/CPH)
R311		AERJ06J102R	CHIP RESISTOR	1	1K Ω,1/16W,5%
R224,R341,R344		AERJ06J103R	CHIP RESISTOR	3	10K,1/16W,5%
R234,R583,R589,R590		AERJ06J103R	CHIP RESISTOR	4	10K,1/16W,5% (P294 APH/CPH)
R568		AERJ06J103R	CHIP RESISTOR	1	10K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R583,R589,R590		AERJ06J103R	CHIP RESISTOR	3	10K,1/16W,5% (H264 APH/CPH)
R340,R490,R588		AERJ06J103R	CHIP RESISTOR	3	10K,1/16W,5% / (H264 APH/CPH,S254 APH/CPH)
R221,R226,R342,R343		AERJ06J104R	CHIP RESISTOR	4	100K,1/16W,5%
R496		AERJ06J104R	CHIP RESISTOR	1	100K,1/16W,5% / (H264 APH/CPH,S254 APH/CPH)
R43,R228		AERJ06J104R	CHIP RESISTOR	2	100K,1/16W,5% (P294 APH/CPH)
R575		AERJ06J125R	CHIP RESISTOR	1	1.2M,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R10		AERJ06J154R	CHIP RESISTOR	1	150K,1/16W,5% (P294 APH/CPH)
R572		AERJ06J154R	CHIP RESISTOR	1	150K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R581		AERJ06J182R	CHIP RESISTOR	1	1.8K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R569		AERJ06J183R	CHIP RESISTOR	1	18K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R181,R320		AERJ06J220R	CHIP RESISTOR	2	22 Ω,1/16W,5%
R567		AERJ06J220R	CHIP RESISTOR	1	22 Ω,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R182,R183		AERJ06J221R	CHIP RESISTOR	2	220 Ω,1/16W,5%
R220,R222,R223		AERJ06J222R	CHIP RESISTOR	3	2.2K,1/16W,5%
R592		AERJ06J222R	CHIP RESISTOR	1	2.2K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R230,R360		AERJ06J222R	CHIP RESISTOR	2	2.2K,1/16W,5% (P294 APH/CPH)
R594		AERJ06J223R	CHIP RESISTOR	1	22K,1/16W,5% / (H264 APH/CPH,S254 APH/CPH)
R573		AERJ06J304R	CHIP RESISTOR	1	300K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R310		AERJ06J332R	CHIP RESISTOR	1	3.3K,1/16W,5%
R579		AERJ06J332R	CHIP RESISTOR	1	3.3K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R330,R440		AERJ06J333R	CHIP RESISTOR	2	33K,1/16W,5%
R45		AERJ06J333R	CHIP RESISTOR	1	33K,1/16W,5% (P294 APH/CPH)
R229		AERJ06J363R	CHIP RESISTOR	1	36K,1/16W,5% (P294 APH/CPH)
R570		AERJ06J363R	CHIP RESISTOR	1	36K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R582		AERJ06J364R	CHIP RESISTOR	1	360K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R580		AERJ06J392R	CHIP RESISTOR	1	3.9K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
R331,R441		AERJ06J471R	CHIP RESISTOR	2	470 Ω ,1/16W,5%
R46		AERJ06J471R	CHIP RESISTOR	1	470 Ω ,1/16W,5% (P294 APH/CPH)
R585		AERJ06J471R	CHIP RESISTOR	1	470 Ω ,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R360		AERJ06J472R	CHIP RESISTOR	1	4.7K,1/16W,5% / (H264 APH/CPH,S254 APH/CPH)
R593		AERJ06J472R	CHIP RESISTOR	1	4.7K,1/16W,5% (H264 APH/CPH)
R592		AERJ06J473R	CHIP RESISTOR	1	47K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R574		AERJ06J624R	CHIP RESISTOR	1	620K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R571		AERJ06J753R	CHIP RESISTOR	1	75K,1/16W,5% / (P294 APH/CPH,H264 APH/CPH)
R14,R180		AERDY2TJ103T	CARBON FILM RESISTOR	2	10K,1/4W,5%
R227		AERDY2TJ104T	CARBON FILM RESISTOR	1	100K,1/4W,5% (P294 APH/CPH)
R40		AERDY2TJ154T	CARBON FILM RESISTOR	1	150K,1/4W,5% / (H264 APH/CPH,S254 APH/CPH)
R12		AERDY2TJ331T	CARBON FILM RESISTOR	1	330 Ω ,1/4W,5%
R25		AERDY1TJ331T	CARBON FILM RESISTOR	1	330 Ω ,1/2W,5% (P294 APH/CPH)
R576,R577,R578,R586		AEROY2F3300T	RESISTOR	4	330 Ω ,1/4W,5% (H264 APH/CPH)
VZ490		AEVTZ6TLT103	VARIABLE RESISTOR	1	10K Ω VR (H264 APH/CPH,S254 APH/CPH)
RY1		AEGG5G1A18	POWER RELAY	1	
RY2-RY7		AEBLD118	POWER RELAY	6	
RY8		AEBLD118	POWER RELAY	1	(P294 APH/CPH)
T10		AETP35K136A	LOW VOLTAGE TRANSFORMER	1	
ZD12		AESZMTZJ150B	ZENER DIODE	1	(P294 APH/CPH,H264 APH/CPH)
SW1-SW4,SW6-SW8,SW11-SW35		EUQ11L05R	SWITCH	32	(P294 APH/CPH)

02/04 / S-6F0 / S-6F1 / S-6F2 / Printed in China

ORDER NO.SIMMC 0203005C1
E2

Service Manual

Microwave Oven

NN-S262SF / NN-S262BF / NN-S262WF / NN-S252BF / NN-S252WF

APH(USA)
CPH(CANADA)

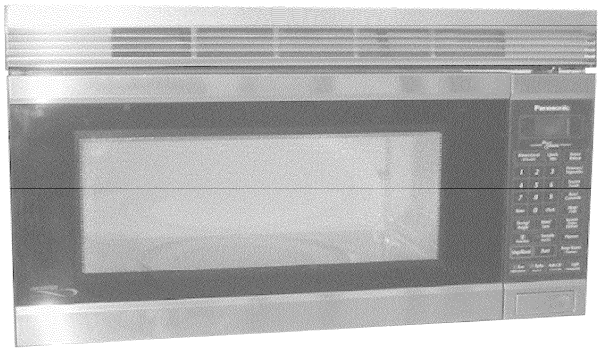

SPECIFICATIONS

Specifications for APH:

Specifications: / Model:	NN-S262SF APH	NN-S262BF/WF APH	NN-S252BF/WF APH
Power Source:	120V AC Single Phase, 60Hz		
Power Requirement:	1430W	1430W	1430W
Output(IEC705-88):	1200W	1200W	1200W
Microwave Frequency:	*2450MHz		
Timer:	*99 min. 99 sec.		
Outside Dimensions:	*29 7/8"(759mm)(W) x 15"(381mm)(D) x 16 7/16"(418mm)(H)		
Oven Cavity Dimensions:	*23 1/4"(591mm)(W) x 14 7/16"(367mm)(D) x 9 1/2"(242mm)(H)		
Weight:	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF		
Output power: IEC705-88 Test Procedure			
Specifications subject to change without notice.			

Specifications for CPH:

Specifications: / Model:	NN-S262SF CPH	NN-S262BF/WF CPH	NN-S252BF/WF CPH
Power Source:	120V AC Single Phase, 60Hz		
Power Requirement:	1430W	1430W	1430W
Output(IEC705-88):	1100W	1100W	1100W
Microwave Frequency:	*2450MHz		
Timer:	*99 min. 99 sec.		
Outside Dimensions:	*29 7/8"(759mm)(W) x 15"(381mm)(D) x 16 7/16"(418mm)(H)		
Oven Cavity Dimensions:	*23 1/4"(591mm)(W) x 14 7/16"(367mm)(D) x 9 1/2"(242mm)(H)		
Weight:	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF		
Output power: IEC705-88 Test Procedure			
Specifications subject to change without notice.			

© 2002 Shanghai Matsushita Microwave Oven Co., Ltd. / All rights

Microwave Oven 1
1. FEATURE CHART 5
2. CONTROL PANEL (APH) 6
3. CONTROL PANEL (CPH) 7
4. OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE 8
4.1. To set clock 8
4.2. Time cooking for two stage 9
4.3. Inverter turbo defrost 10
4.4. Inverter auto cooking 10
4.5. Popcorn 11
4.6. Auto reheat 11
4.7. Power level 12
5. SCHEMATIC DIAGRAM (APH) 12
6. SCHEMATIC DIAGRAM (CPH) 13
7. DESCRIPTION OF OPERATING SEQUENCE 14
7.1. Variable power cooking control 14
Variable Power Cooking 14
7.2. Inverter power supply circuit [NEW H.V.] 15
7.3. Inverter turbo defrost 15
Inverter Turbo Defrost 16
8. CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING 16
8.1. Check the grounding 16
8.2. Inverter warnings [NEW H.V.] 16
8.3. When parts must be replaced, remove the power plug from the outlet. 18
8.4. When the 18 Amp fuse is blown due to the operation of short switch: 18
8.5. Avoid inserting nails, wire, etc. through any holes in the unit during operation. 18
8.6. Confirm after repair 19
9. DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE 20
9.1. Magnetron 20
9.2. Digital programmer circuit (DPC) and membrane key board. 20
9.3. Low voltage transformer and/or power relays (RY1, RY2) 21
9.4. Inverter power supply (U) 22
9.5. Door assembly 24
9.6. Stirrer motor 25
9.7. Blower motor (U) 25
9.8. Fan motor A (for H.V. inverter (U) cooling) 25
9.9. Fan motor B (for magnetron cooling) 26
9.10. Turntable motor 26
10. COMPONENT TEST PROCEDURE 27
10.1. Primary latch switch, secondary (secondary latch switch and power relay B) interlocks. 27
10.2. Short switch & monitor 27
10.3. Magnetron 28
10.4. Membrane key board (Membrane switch assembly) 28
10.5. Inverter power supply (U) 28
11. MEASUREMENTS AND ADJUSTMENTS 30
11.1. Adjustment of primary latch switch, secondary latch switch and short switch. 30
11.2. Measurement of microwave output 31
TABLE (1L-1min.test) 31
12. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE 32
12.1. Equipment 32
12.2. Procedure for measuring radiation leakage 32

12.2.1. Measurement with the outer panel removed. 33
12.2.2. Measurements with a fully assembled oven. 33
12.3. Record keeping and notification after measurement 33
12.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer. 33
13. TROUBLESHOOTING GUIDE 34
13.1. Trouble related to digital programmer circuit 36
13.2. Troubleshooting of inverter circuit (U) and magnetron [NEW H.V.] 38
13.3. How to check the semiconductors using an OHM meter 38
14. EXPLODED VIEW AND PARTS LIST 39
15. PARTS LIST 39
16. DOOR ASSEMBLY 43
17. WIRING MATERIALS 43
18. ESCUTCHEON BASE ASSEMBLY 44
19. PACKING AND ACCESORIES 45
20. DIGITAL PROGRAMMER CIRCUIT 46
21. DIGITAL PROGRAMMER CIRCUIT 48

reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Though this product has been manufactured in compliance with:
   "Federal Performance Standard 21 CFR Subchapter J"(D.H.H.S): U.S.A. models
   or "Radiation Emitting Devices Act"(Health and Welfare Canada): Canadian models
   it is very important all repairs should be made in accordance with procedures described in this manual to avoid being exposed to excessive microwave radiation.
3. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
4. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
5. Any serviceman who learns of any accident pertaining to microwave radiation leakage including the oven operating with open door should immediately notify the appropriate address listed below and Center for Devices and Radiological Health, DHHS.

IN U.S.A. (PASC)	Panasonic Services Company 50 Meadowland Parkway, Secaucus, New Jersey 07094 Attention: Technical Service Division. (201)348-7000	IN PUERTO RICO (PSC)	PSC San Gabriel Industrial Park 65th Infantry Ave. Km.9.5 Carolina, Puerto Rico 00985 (787)750-4300
		IN CANADA (PCI)	Panasonic Canada Inc. 5770 Ambler Drive, Mississauga, Ontario, L4W2T3 (905)624-5010

6. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(A) Do not operate or allow the oven to be operated with the door open.

(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
   (1) Interlock operation
   (2) Proper door closing
   (3) Seal and sealing surfaces (arcing, wear, and other damage)
   (4) Damage to or loosening of hinges and latches.
   (5) Evidence of dropping or abuse

(C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, waveguide or transmission line, and cavity for proper alignment, integrity and connections.

(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.

(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50-70˚F(30 - 40˚C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700± 20˚F (370 ± 10˚C).
- Pb free solder will tend to splash when heated too high (about 1100˚F/600˚C).

Panasonic®

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. NEW H.V.

IT HAS: 1. **Very high voltage and high current circuits.**
It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.

2. **Aluminum heat sink is energized with very high voltages and high heat energy.**
3. **Very high voltage may remain in circuitry even when oven is off. High voltage may remain in the capacitors on the board.**

DO NOT:

* 1. **Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage may remain in circuit.**
* 2. **Do not touch aluminum heat sink because it is very hot in high voltage and also very hot in high heat energy.**
* 3. **Do not try to adjust or tamper with preset volume on the Inverter board because it is very dangerous to adjust without proper test equipment.**
* 4. **Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.**
* 5. **For USA only:**
Do not try to repair Inverter PCB because it is very dangerous to repair it. Replace as whole High Voltage Inverter Circuit unit and return fully re-packed with original shipping box and shipping materials.

INVERTER POWER SUPPLY

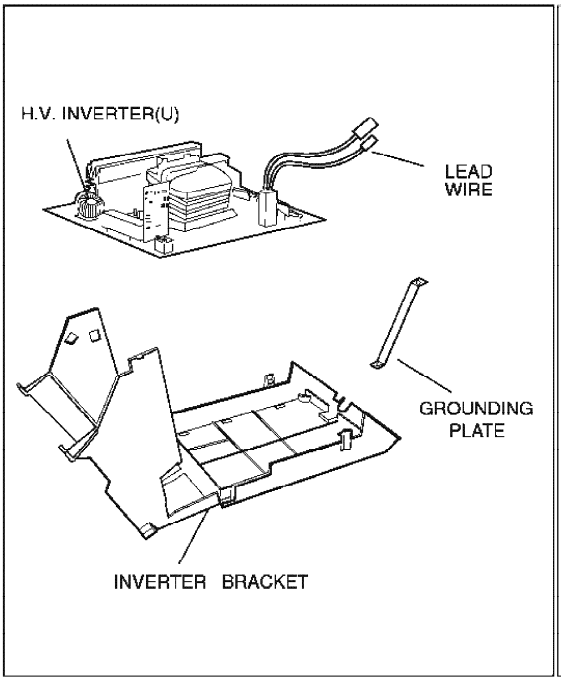

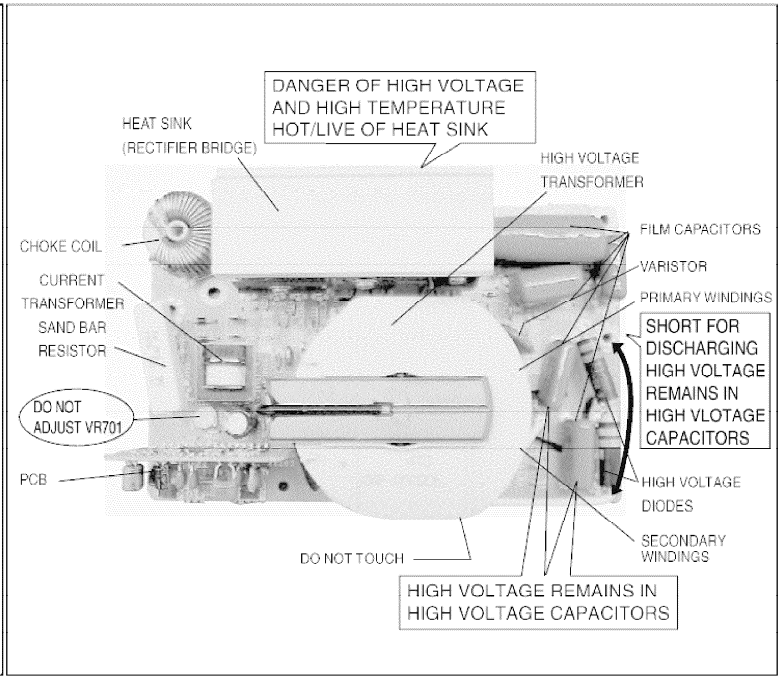

1. FEATURE CHART

MODEL / FEATURE	NN-S262	NN-S252
Five Stage Cooking	O	O
Inverter Turbo Defrost	O	O
Sensor Reheat	O	-
Sensor Cooking	O	-
Auto Reheat	-	O
Inverter Auto Cooking	-	O
Quick Min	O	O
Popcorn	O	O
Digital Clock	O	O
Timer	O	O
Child Safety Lock	O	O
Vent Fan	O	O
Cooktop Light	O	O

2. CONTROL PANEL (APH)

NN-S262

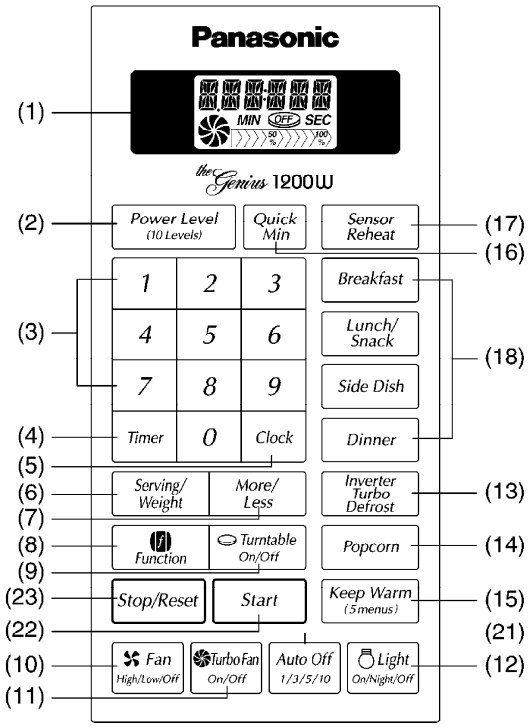

NN-S252

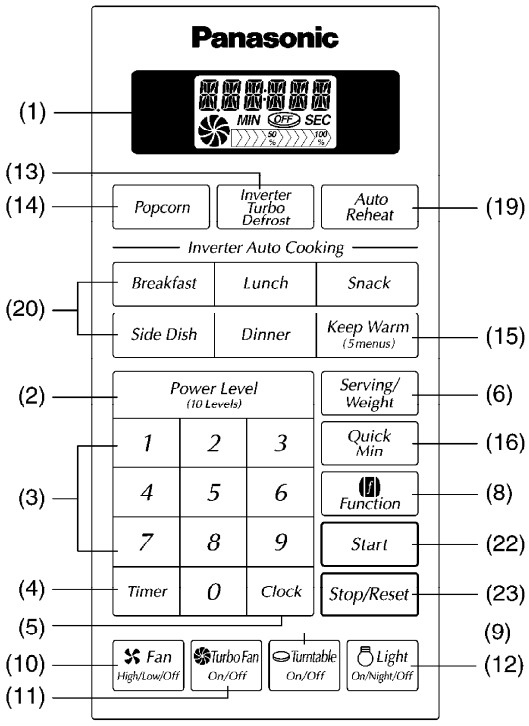

(1) Display Window
(2) Power Level Pad
(3) Number Pads
(4) Timer Pad
(5) Clock Pad
(6) Serving/Weight Pad
(7) More/Less Pad
(8) Function Pad
(9) Turntable On/Off Pad
(10) Fan High/Low/Off Pad
(11) Turbo Fan On/Off Pad
(12) Light On/Night/Off Pad
(13) Inverter Turbo Defrost Pad
(14) Popcorn Pad
(15) Keep Warm Pad
(16) Quick Min Pad
(17) Sensor Reheat Pad
(18) Sensor Cooking Pads
(19) Auto Reheat Pad
(20) Inverter Auto Cooking Pads
(21) Auto Off Pad

(22) Start Pad

One tap allows oven to begin functioning. If door is opened or STOP/RESET Pad is pressed once during oven operation, START Pad must again be pressed to restart oven.

(23) Stop/Reset Pad

Before cooking: One tap clears your instructions.
During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the display window.

3. CONTROL PANEL (CPH)

NN-S262

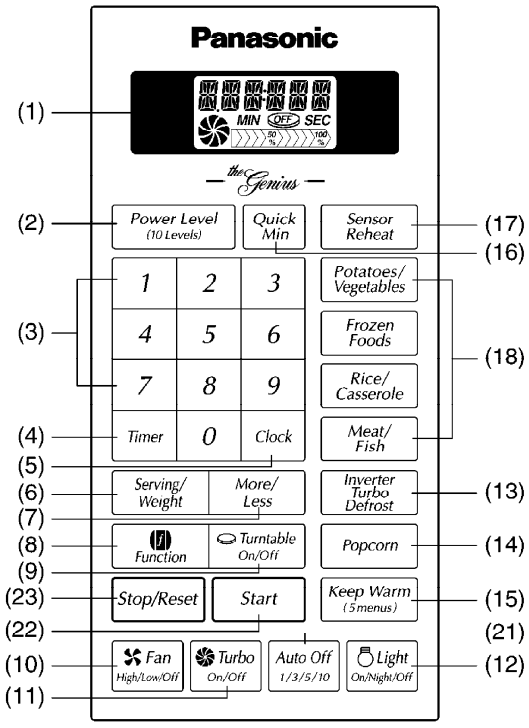

NN-S252

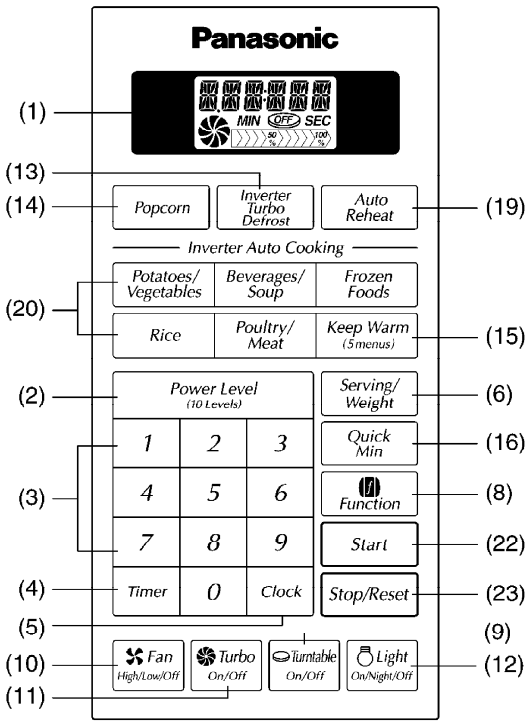

(1) Display Window
(2) Power Level Pad
(3) Number Pads
(4) Timer Pad
(5) Clock Pad
(6) Serving/Weight Pad
(7) More/Less Pad
(8) Function Pad
(9) Turntable On/Off Pad
(10) Fan High/Low/Off Pad
(11) Turbo Fan On/Off Pad
(12) Light On/Night/Off Pad
(13) Inverter Turbo Defrost Pad
(14) Popcorn Pad
(15) Keep Warm Pad
(16) Quick Min Pad
(17) Sensor Reheat Pad
(18) Sensor Cooking Pads
(19) Auto Reheat Pad
(20) Inverter Auto Cooking Pads
(21) Auto Off Pad

(22) Start Pad

One tap allows oven to begin functioning. If door is opened or STOP/RESET Pad is pressed once during oven operation, START Pad must again be pressed to restart oven.

(23) Stop/Reset Pad

Before cooking: One tap clears your instructions.
During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the display window.

4. OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE

4.1. To set clock

OPERATION	SCROLL DISPLAY
1. Plug the power supply cord into wall outlet.	BEFORE USE REFER TO OPERATING INSTRUCTIONS
2. Press [Clock] pad.	☼ ☼
3. Enter time of day (TOD) by pressing appropriate [Number] pads.	11 ☼ 25
4. Press [Clock] pad. TOD has now been resistered into the digital programmer circuit and will count up by minutes.	11 : 25

4.2. Time cooking for two stage

OPERATION	SCROLL DISPLAY
1. Place a water load in the oven.	
2. Press [Power Level] pad once to set High power. (1st stage)	P 10
3. Set for 5 seconds by pressing [Number] pads. 5 sec.= [5]	5 SEC
4. Press [Power Level] pad 6 times to set Medium power. (2nd stage)	P 5
5. Set for 1 minute by pressing [Number] pads. 1 Min.= [1] [0] [0]	1 00 MIN SEC

OPERATION	SCROLL DISPLAY
6. Press [Start] pad.	5 SEC
7. When 1st stage cooking time has elapsed. Oven beeps twice and automatically switches to 2nd stage cooking.	1 MIN 0 0 SEC
8. When 2nd stage cooking time has elapsed, oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display

4.3. Inverter turbo defrost

OPERATION	SCROLL DISPLAY
1. Press [Inverter Turbo Defrost] Pad.	INVERTER TURBO DEFROST SET WEIGHT
2. Set the weight for 1 lb by pressing [Number] pads. 1 lb= [1] [0]	1.0 LB
3. Press [Start] pad.	5 MIN 28 SEC
4. Press [Stop/Reset] Pad twice.Oven shuts off.	Time of day or colon if set appears in the display.

4.4. Inverter auto cooking

OPERATION	SCROLL DISPLAY
1. Press [Beverages] pad once.	BEVERAGES PRESS SERVING WEIGHT
2. Press [Serving/Weight] pad twice to select 2 cups	2 CUPS
3. Press [Start] pad.	
When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.5. Popcorn

OPERATION	SCROLL DISPLAY
1. Press [Popcorn] pad once for 3.5 oz serving. (Select 3.5, 3.0, 2.85, 2.65, 1.75 oz)	
2. Press [Start] pad.	
When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.6. Auto reheat

OPERATION	SCROLL DISPLAY
1. Press [Auto Reheat] pad twice for two servings.	AUTO REHEAT
2. Press [Start] pad.Auto Reheat cycle begins time counts down.	1 MIN 21 SEC
3.When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.7. Power level

Press Power Level	Power Level	Display Window
once	P10 (HIGH)	P10
twice	P9	P9
3 times	P8	P8
4 times	P7 (MED.HIGH)	P7
5 times	P6 (MEDIUM)	P6
6 times	P5	P5
7 times	P4	P4
8 times	P3 (MEDIUM-LOW)	P3
9 times	P2	P2
10 times	P1 (LOW)	P1

5. SCHEMATIC DIAGRAM (APH)

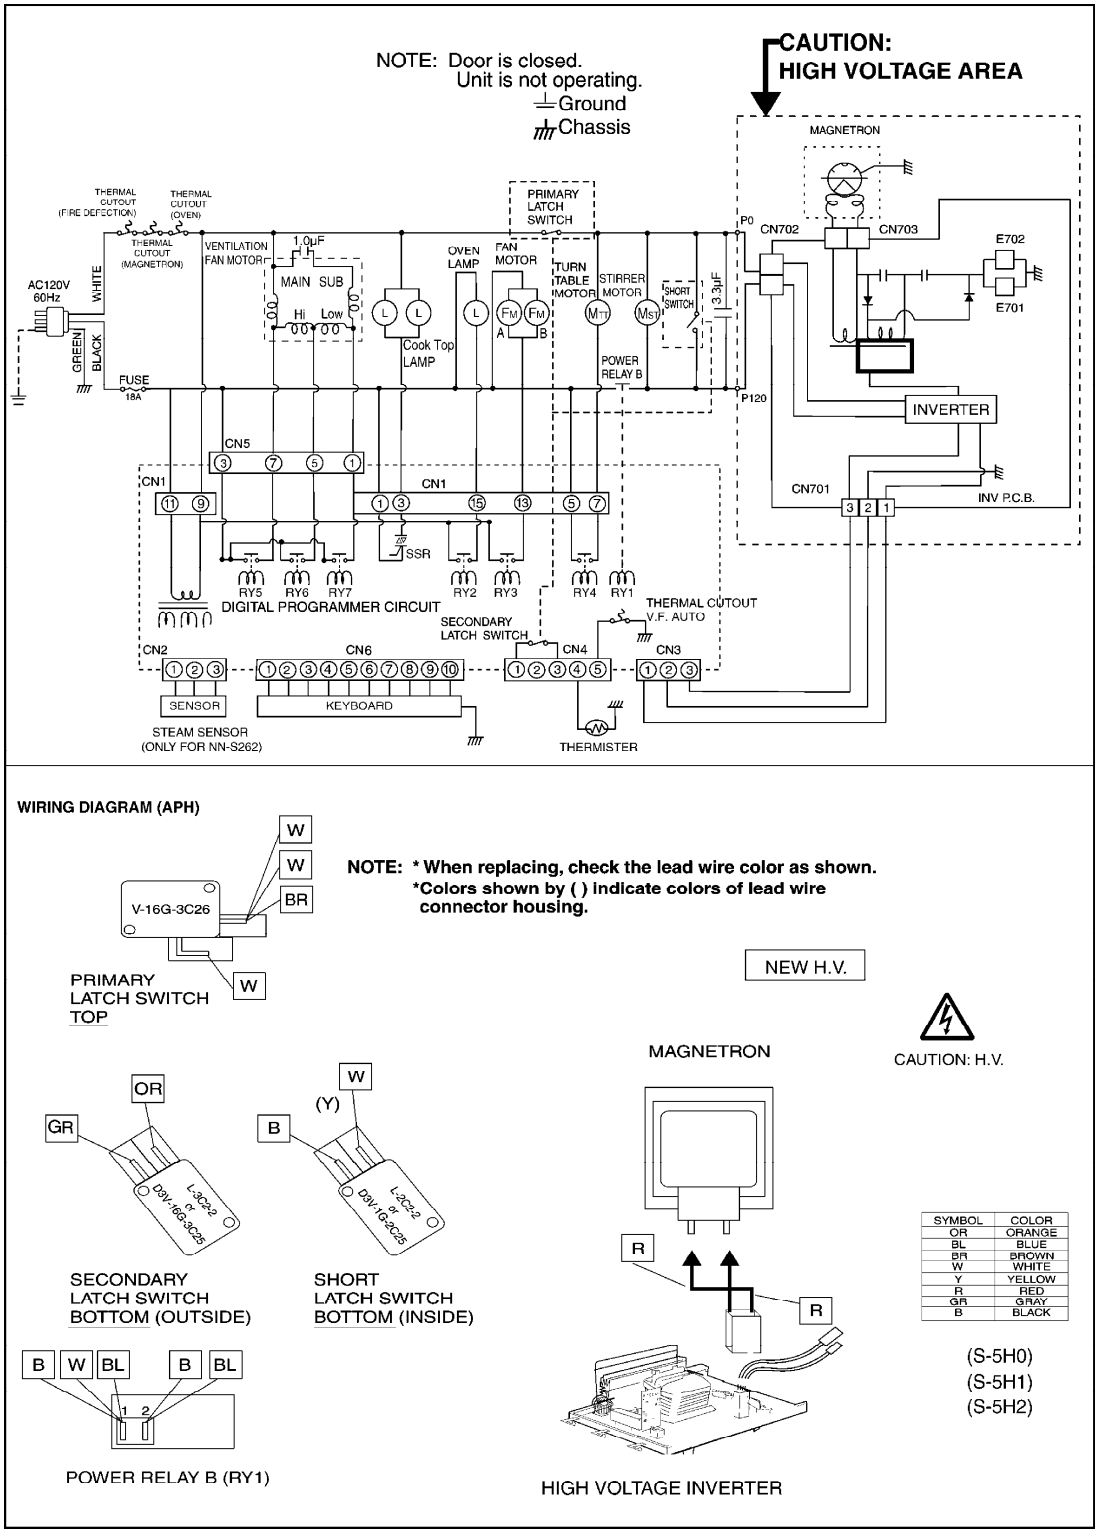

6. SCHEMATIC DIAGRAM (CPH)

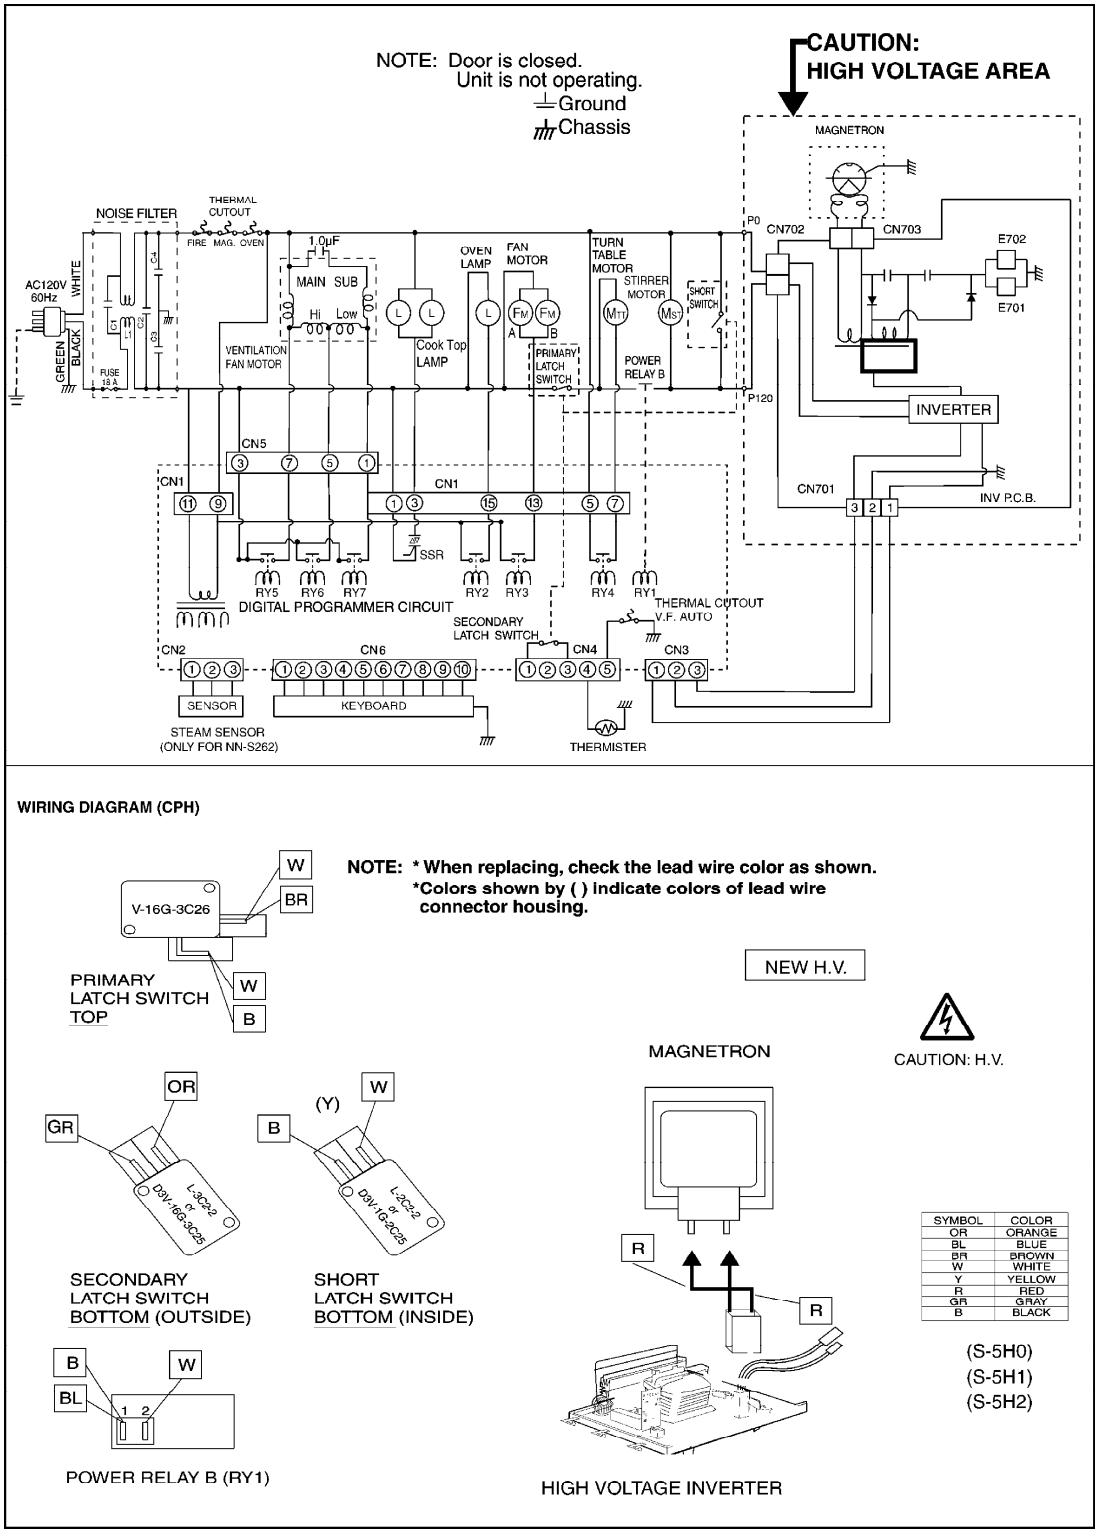

7. DESCRIPTION OF OPERATING SEQUENCE

7.1. Variable power cooking control

High Voltage Inverter Power supply (U) controls output power by the signal from Digital Programmer Circuit (DPC). Power relay stays ON for P4 to P10 and For P1 to P3, both inverter drive signal and power relay to control output power.

NOTE:

The ON/OFF time ratio does not correspond with the percentage of microwave power since approximately 2 seconds are required for heating of magnetron filament.

Variable Power Cooking

POWERSETTING		OUTPUT POWER(%)	ON-OFF TIME OF POWER RELAY B (RY1)	
		APPROX.	ON(SEC)	OFF(SEC)
HIGH	P10	100%	22	0
	P9	90%	22	0
	P8	80%	22	0
MEDIUM-HIGH	P7	70%	22	0
MEDIUM	P6	60%	22	0
	P5	50%	22	0
	P4	40%	22	0
MEDIUM-LOW	P3	30%	17	5
	P2	20%	11	11
	P1	10%	6	16
DEFROST	P3	30%	17	5

7.2. Inverter power supply circuit [NEW H.V.]

This Inverter Power Supply Circuit supplies 4,000V DC to the magnetron tube from the line voltage, 120V 60Hz AC input. functions as the H.V. transformer, the H.V.capacitor and H.V.Diode.

1. **The AC input voLtage 120V 60Hz is rectified to DC voltage immediately.**
2. **DC voltage will be supplied to the switching devices called IGBT. These devices will be switched ON-OFF by the 20 to 40 kHz PWM. (pulse width modulation) signal from the microcomputer in the DPC.**
3. **This drives the High voltage transformer to increase up to 2,000V AC and approximately 3V AC by means of transformer.**
4. **Then the half-wave doubler voltage rectifier circuit, consisting of the H.V. diodes and Capacitors, generates the necessary 4,000V DC needed for the magnetron.**
5. **Output power of the magnetron tube is always monitored by the signal output from the current transformer built into the inverter ciruit.**
6. **Then this signal will be fed back to the microcomputer in the DPC to determine operating conditions and output necessary to control PWM signal to the Inverter Power Supply to control output power.**

7.3. Inverter turbo defrost

When this Auto Control feature is selected and the Start Pad is tapped:

1. **The digital programer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window. Table shows the corresponding cooking times for respective serving by categories.**
2. **When cooking time the display window has elapsed, the oven tums off automatically by a control signal from the digital programmer circuit.**

Inverter Turbo Defrost

WEIGHT SELECTED	COOKING TIME
1.0LB	5 min.28 sec.

8. CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. Though it is free from danger in ordinary use, extreme care should be taken during repair.

CAUTION
Servicemen should remove their watches whenever working close to or replacing the magnetron.

8.1. Check the grounding

Do not operate on a 2-wire extension cord. The microwave oven is designed to be used when grounded. When it is inoperative, make sure it is grounded properly before beginning repair work.

8.2. Inverter warnings [NEW H.V.]

DANGER OF HIGH VOLTAGE AND HIGH / TEMPERATURE (HOT/LIVE) OF THE INVERTER / POWER SUPPLY (U)

This High Voltage Inverter Power Supply circuit supplies very high voltage and very high current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair. As you can see, it looks like a TV flyback transformer, however the current is extremely large and so danger exists because of its high current and high voltages.

The aluminum heat sink is also energized with high voltage (HOT), so do not touch when AC input terminal is connected to the power line because one of the IGBT switching power devices (Collector) is directly connected to the Aluminum heat sink.

The Aluminum heat sink may be HOT from heat energy; therefore, extreme care should be taken during servicing and replacing.

WARNING OF INVERTER POWER SUPPLY (U) / GROUNDING

Check the High Voltage Inverter Power Supply circuit grounding. This High Voltage Inverter Power Supply circuit board must have a proper chassis ground by the grounding bracket to the chassis ground; otherwise, this H.V. Inverter circuit board will expose very high voltage and cause extreme DANGER! Be sure to have proper grounding by the grounding plate and screws.

WARNING OF DISCHARGING HIGH VOLTAGE CAPACITORS

Warning about the electric charge in the high voltage capacitors. For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors in the inverter power supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and short the Inverter output terminal of the magnetron filament terminals to the chassis ground with an insulated handle screwdriver to discharge. Please make sure to touch chassis ground side first then short to the output terminals.

WARNING

There is high-voltage present, with high-current capabilities in the circuits of the primary, and secondary windings, choke coil and heat sink of the Inverter. It is extremely dangerous to work on or near these circuits with oven energized.
DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

WARNING

Never touch any circuit wiring with your hand nor with an insulated tool during operation.

8.3. When parts must be replaced, remove the power plug from the outlet.

8.4. When the 18 Amp fuse is blown due to the operation of short switch:

WARNING

When the 18 Amp. fuse if blown due to the operation of short switch, you must replace Primary latch switch and short switch. Also replace power relay B (RY1) when the continuity check reads shorted contacts (1-2).

1. **This is mandatory. Refer to "Measurements and Adjustments" for these switches.**
2. **When replacing the fuse, confirm that it has the appropriate rating for these models.**
3. **When replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.**

8.5. Avoid inserting nails, wire, etc. through any holes in the unit during operation.

WARNING

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any other holes or gaps, because such objects may work as an antenna and cause microwave leakage.

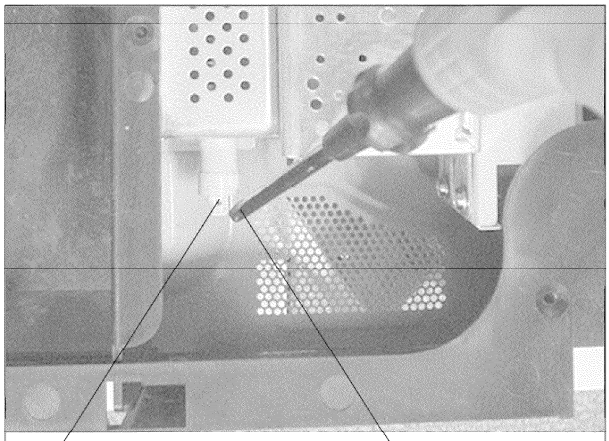

Touch chassis side first then short to the terminal of the magnetron filament terminal.

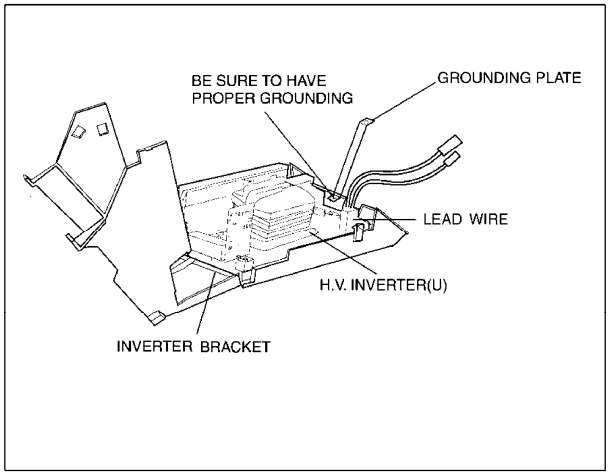

8.6. Confirm after repair

1. **After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing. / Microwaves might leak if screws are not properly tightened.**
2. **Make sure that all electrical connections are tight before inserting the plug into the wall outlet.**
3. **Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage.)**

CAUTION / MICROWAVE RADIATION

DO NOT BECOME EXPOSED TO RADIATION FROM THE MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

IMPORTANT NOTICE [NEW H.V.]

1.The following components have potentials above 2000V while the appliance is operated.

*** Magnetron**

*** High voltage transformer**

*** High voltage diode**

*** High voltage capacitor**

Pay special attention to these components.

2.When the appliance is operated with the door hinge or magnetron fixed incorrectly, the microwave leakage can reach more than 5mW/cm2. After repair or exchange, it is very important to check if magnetron and the door hinge is correctly fixed.

9. DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

9.1. Magnetron

1. Discharge the high voltage capacitor.

2. Disconnect 2 connectors from fan motor B.

3. Remove 4 screws holing fan motor B (U) assembly.

4. Remove 3 screws which holding exhaust guide (U) onto oven.

5. Tilt exhaust guide (U).

6. Remove 1 screw holding air guide A and then remove air guide A.

7. Remove 2 high voltage lead wires from magnetron filament terminal.

8. Remove 4 screws holding magnetron.

NOTE:

After replacing the magnetron, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION

When replacing the magnetron, be sure the antenna gasket is in place.

9.2. Digital programmer circuit (DPC) and membrane key board.

NOTE:

Be sure to ground any static electric charge built up on your body

before handling the DPC.

1. **Disconnect all connectors from D.P.C.**
2. **Remove 2 screws holding escutcheon base and slide the escutcheon base upward slightly.**
3. **Release CN6 connector's lock of D.P.C by pushing both levels to inside and pull them upward, and remove flat cable of membrane keyboard.**
4. **Remove 3 screws holding D.P.C.**

To replace membrane key board

5. **Push the upper part of key board (display window portion) from back of escutcheon base and peel off escutcheon sheet and membrane key board completely from escutcheon base.**

NOTE:

1. The membrane key board is attached to the escutcheon base with double faced adhesive tape. Therefore, applying hot air such as using a hair dryer is recommended for smoother removal. / 2. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided. / 3. Alignment position of membrane key board is as follows; / Membrane key board: Right and upper edges / Escutcheon sheet: Right and upper edges

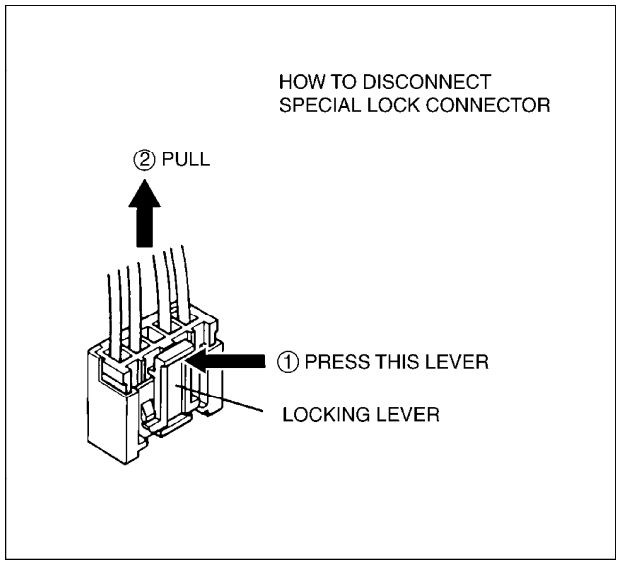

9.3. Low voltage transformer and/or power relays (RY1, RY2)

NOTE:

Be sure to ground any static electric charge built up on your body

before handling the DPC.

(A) Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.

NOTE:

Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

(B) With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

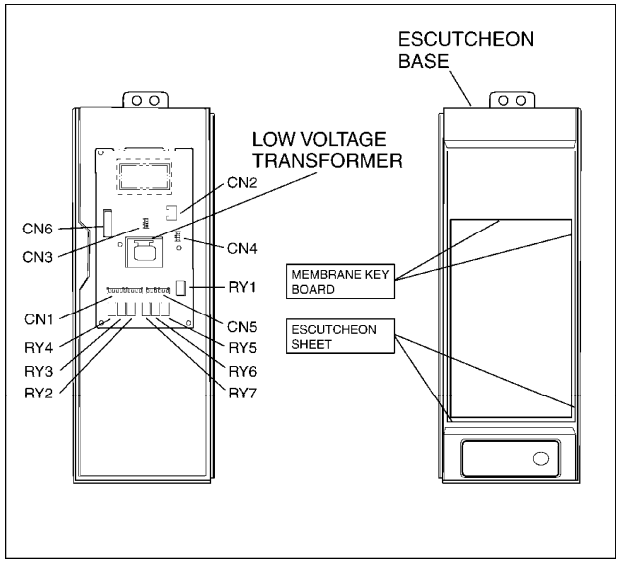

9.4. Inverter power supply (U)

CAUTIONS WHILE REPLACING INVERTER / POWER SUPPLY (U)

1. Make sure to leave the grounding plate in its place.

2. Make sure to securely tighten grounding screw from the bottom of chasis (base).

3. Securely connect 3 lead wire connectors.

4. Make sure the heat sink has enough space (gap) from the oven. Take special care not to touch any lead wire to the aluminum heat sink because it is hot.

1. Remove 1 screw holding orifice on the cover plate.

2. Remove 1 screw holding top front cover on the oven.

3. Remove 1 screw holding Inverter grounding plate on the oven.

4. Remove 3 screws holding Inverter bracket on top front cover.

5. Slide 2 locking of Inverter bracket at the top front cover slightly.

6. Disconnect 2 lead wires from fan motor A terminals.

7. Remove 1 screw holding orifice on the Inverter bracket.

8. Release 2 tabs to make Inverter bracket flat, and then remove orifice.

9. Release 2 tabs on the Inverter bracket and make flat.

10. Unplug 3 connector on H.V. Inverter (U).

11. Remove 3 screws holding H.V. Inverter (U) onto Inverter bracket.

12. Remove 1 screw holding grounding Plate on the H.V. Inverter (U).

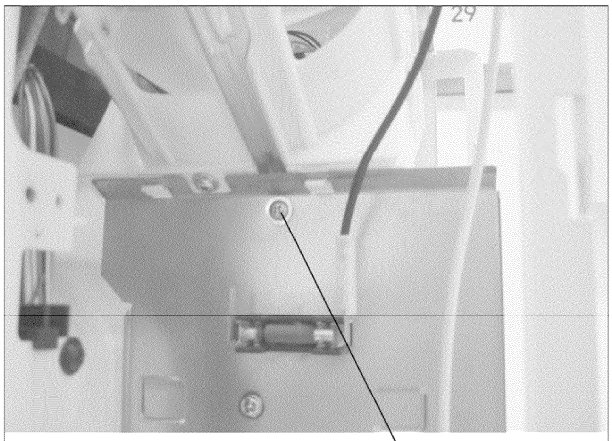

① FOR HOLDING ORIFICE ON THE COVER PLATE

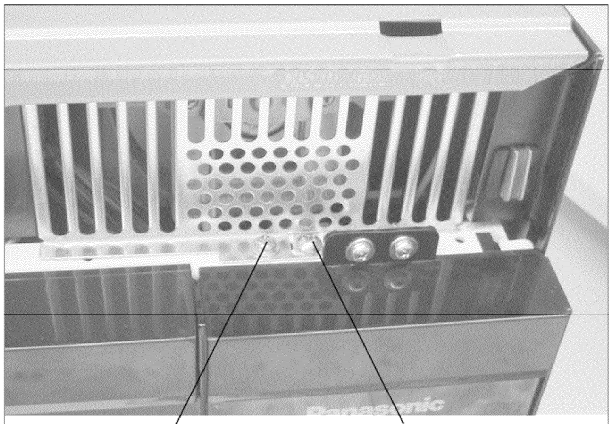

② FOR HOLDING TOP FRONT COVER ON THE OVEN

③ FOR HOLDING INVERTER GROUNDING PLATE ON THE OVEN

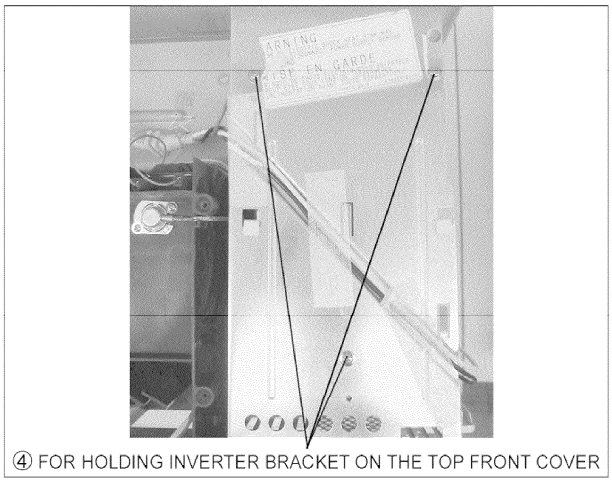

9.5. Door assembly

1. **Remove door C from door E by carefully pulling outward starting from upper right hand corner using a flat blade screwdriver.**
2. **Separate door E from tabs on door A and remove door A.**
3. **Remove door screen B from door A.**
4. **Remove door key and door key spring.**
5. **Open Door E at the opening angle of approximately 10°(Note: The door cannot be removed if the opening angle is greater than 10°).**
6. **Remove the door E from its hinges by pushing the door E's bottom upward and out.**
7. **Replace other components.**

NOTE:

Door alignment is critical. If door is misaligned, apply pressure until alignment is achieved.

NOTE:

After replacement of the defective component parts of the door, reassemble, install, and perform microwave leakage test.

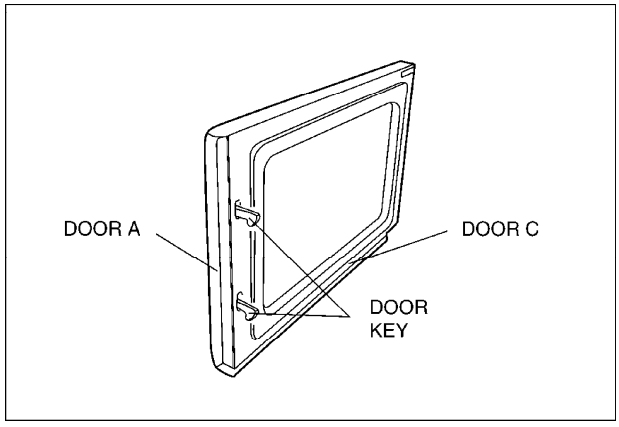

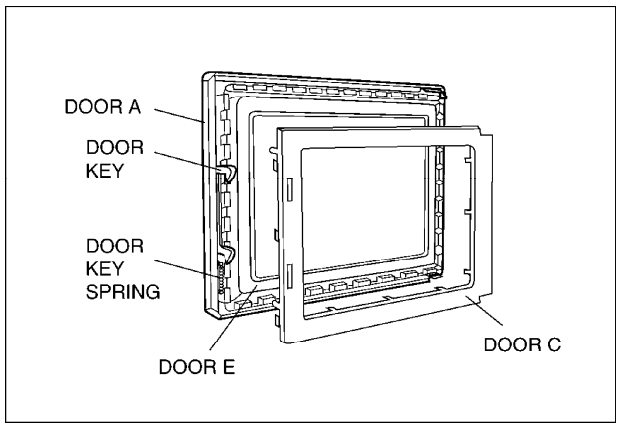

9.6. Stirrer motor

1. Release 1 canoe clip on the cover and then remove the cover.
2. Pull out stirrer.
3. Remove 3 screws which holding exhaust guide A on the oven.
4. Tilt exhaust guide A.
5. Disconnect 2 connectors from stirrer motor.
6. Remove 1 screw holding stirrer motor.
7. Release from retainer tab by turn spinning certain angle, remove stirrer motor.

9.7. Blower motor (U)

1. Disconnect 1 connector from blower motor (U).
2. Remove 2 screws which holding blower motor (U) on the oven.
3. Remove blower motor (U).

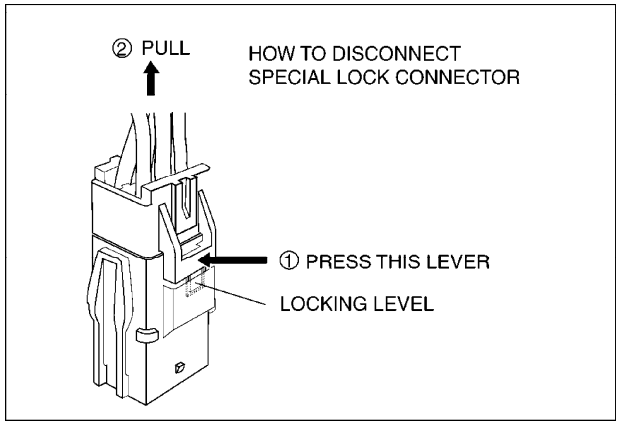

9.8. Fan motor A (for H.V. inverter (U) cooling)

Disassembly procedure step 1~8 same as above H.V. Inverter (U).

9. Pull out fan blade.

10. Remove 2 screws which holding fan motor A on the orifice, and remove fan motor A.

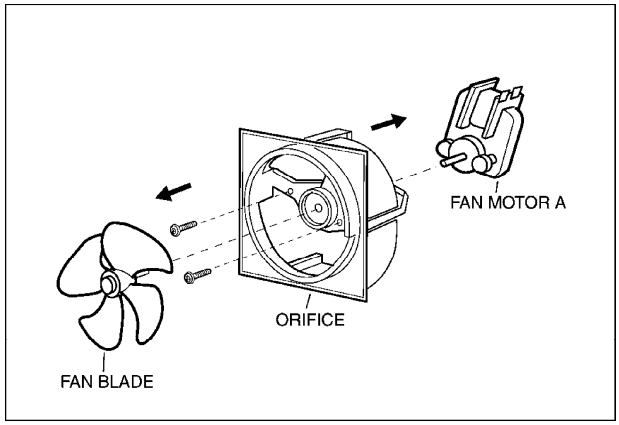

9.9. Fan motor B (for magnetron cooling)

1. Disconnect 2 lead wires from fan motor B terminals.
2. Remove 4 screws holing fan motor B(U)Assembly.
3. Remove 4 screws which holding fan case installation plate on the fan case C.
4. From interior of fan case C, remove 2 screws holding fan motor B.

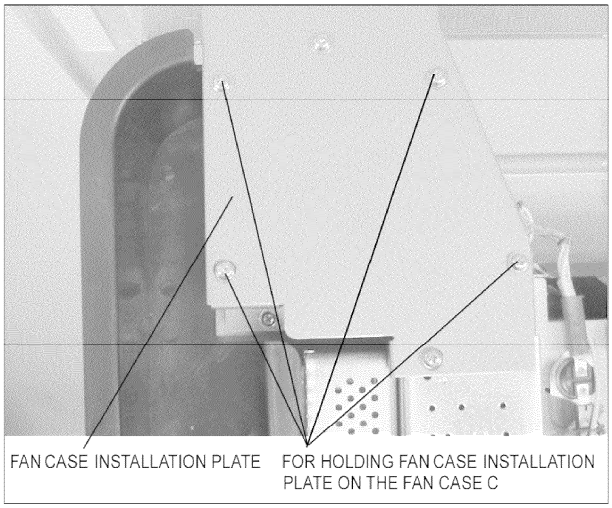

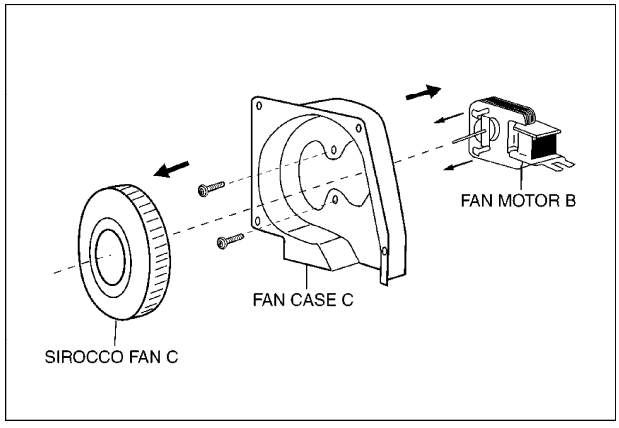

9.10. Turntable motor

1. Disconnect 2 lead wires from turntable motor terminals.
2. Remove 1 screw holding turntable motor.
3. Release from retainer tab by turn spinning certain angle, remove turntable.

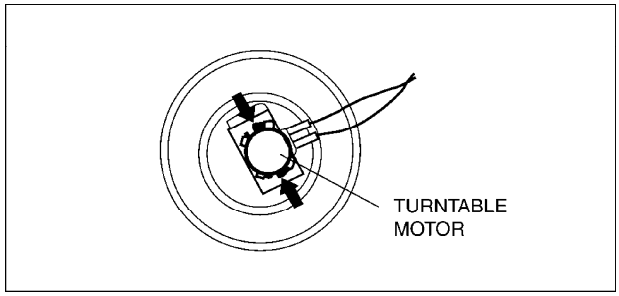

10. COMPONENT TEST PROCEDURE

CAUTION [NEW. H.V.]

1. High voltage is present at the high voltage terminal of the High Voltage Inverter (U) including aluminum heat sink during any cook cycle.

2. It is neither necessary nor advisable to attempt measurement of the high voltage.

3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitors.

10.1. Primary latch switch, secondary (secondary latch switch and power relay B) interlocks.

1. Unplug the lead connectors to Power Relay B and verify continuity of the power relay B 1-2 terminals.
2. Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.
3. Test the continuity of switches at door opened and closed positions with ohm meter (low scale). / Normal continuity readings should be as follows.

	Door Closed	Door Opened
Primary Latch Switch	0 Ω (close)	∞ Ω (open)
Secondary Latch Switch	0 Ω (close)	∞ Ω (open)
Power Relay B	∞ Ω (open)	∞ Ω (open)

10.2. Short switch & monitor

1. Unplug lead wires from Inverter Power Supply (U) primary terminals.
2. Connect test probes of ohm meter to the disconnected leads which

were connected to Inverter Power Supply (U).

3. Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter. / Normal continuity readings should be as follows.

Door Opened	Door Closed
0 Ω	∞ Ω

10.3. Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

1. Isolate magnetron from the circuit by disconnecting the leads.

2. A continuity check across magnetron filament terminals should indicate one ohm or less.

3. A continuity check between each filament terminal and magnetron case should read open.

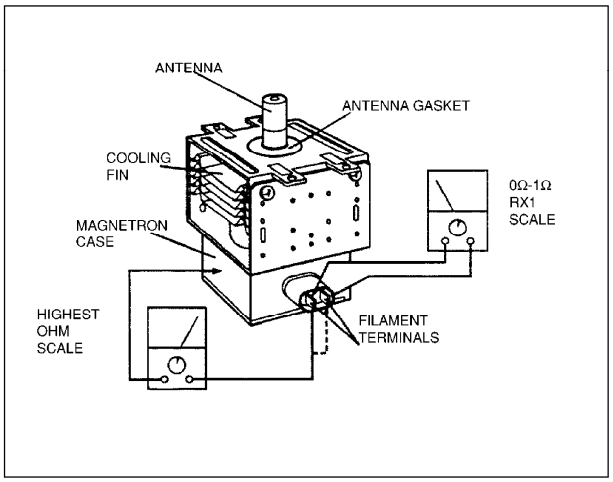

10.4. Membrane key board (Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board. The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

10.5. Inverter power supply (U)

DO NOT try to REPAIR this H.V. Inverter power supply (U).Replace as whole H.V. Inverter(U) Unit.

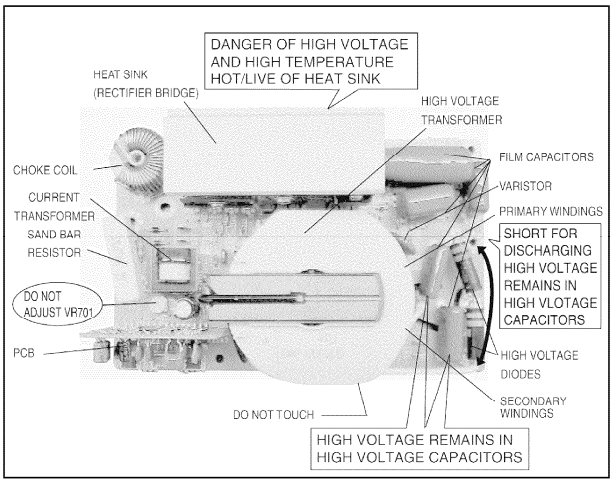

DANGER HIGH VOLTAGE

Test if failure codes of H97 or H98 appears by doing the following procedure. It is recommended to use an AC line input current Ampere meter for testing.

Test1

1. Program DPC.
   A. Tap Clock
   B. Tap Timer
   C. Tap Start
   D. Tap Power Level

2. Place 1 liter of water load into oven cavity.

3. Unplug 2 pin H.V. lead wire connector CN703 from magnetron tube.

4. Program oven at High power for 1 minute and press start.
   A. After approximately 23 seconds, oven stops.
   B. During oven operation, input current is approximately 0.5 to 1A. If both a and b are OK, please proceed to test 2.

	INPUT AMPERE	FAILURE CODE
Unplug CN703	0.5 to 1A	Oven stops in 23 seconds after started.

Test2

Continued from Test 1

1. Unplug 3 pin connector CN701, CN703 remains unplug.

2. Set oven at High power for 1 minute and start.
   A. After approximately 3 seconds, oven stops.

B. During oven operation, input current is approximately less than 0.4A.

	INPUT AMPERE	FAILURE CODE
Unplug CN701	<0.4A	Oven stops in 3 seconds after started.

If both a and b are OK, the Inverter Power Supply (U) can be determined OK.

11. MEASUREMENTS AND ADJUSTMENTS

WARNING

- For continued protection against radiation hazard, replace only with identical replacement parts (For touch models Part No. A 6142 - F60, Type No. V-16G-3C26 for Primary latch switch; Part No. A61425180AP, Type No. L-3C2-2 for Secondary latch switch and Part No. A61785180AP, Type No. L-2C2-2 for short switch.)
- When the 18 Amp fuse is blown due to the operation of the short switch, you must replace power relay B. Primary latch switch and the short switch. Then follow the installation procedures below.
- Interlock switch replacement In replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.
- Refer to schematic diagram to ensure proper connection.

11.1. Adjustment of primary latch switch, secondary latch switch and short switch.

1. **When mounting Primary latch switch,Secondary latch switch and short switch to door hook assembly, mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in table.**
   NOTE:
   No specific adjustment during installation of Primary latch switch, Secondary latch switch and short switch to the door hook is necessary.
2. **When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of arrow in the illustration so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.**
3. **Reconnect the short switch and check the continuity of the monitor**

circuit and all latch switches again by following the components test procedures.

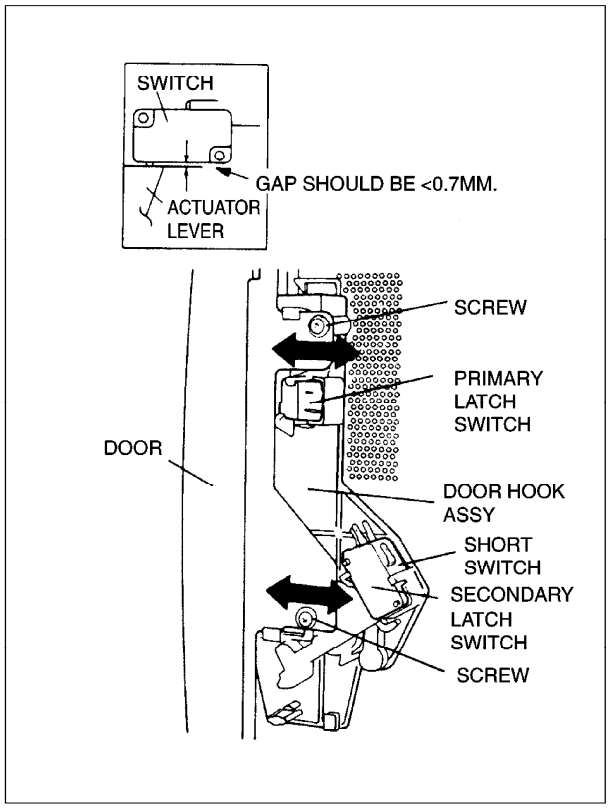

11.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However,due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

***1 liter beaker *Glass thermometer / *Wrist watch or stopwatch**

NOTE:

Check the line voltage under load.Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. **Fill the beaker with exactly one liter of tap water.Stir the water using the thermometer and record the beaker's temperature. (recorded as T1).**
2. **Place the beaker on the center of glass cook plate. / Set the oven for High power and heat it for exactly one minute.**
3. **Stir the water again and read the temperature of the beaker. (recorded as T2).**
4. **The normal temperature rise at High power position for each model is as shown in table.**

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1100W(IEC705-88)	Min. 16.9°F(9.4°C)
1200W(IEC705-88)	Min. 18.5°F(10.3°C)

12. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm2 (1mW/cm2 for Canada) inform PASC, PSC, or PCI immediately. After repairing or replacing any radiation safety device, keep a written record for future reference, as required by D.H.H.S. and Health and Welfare Canada regulation. This requirement must be strictly observed. In addition, the leakage reading must be recorded on the service repair ticket while in the customer's home.

NOTE:

The U.S. Government standard is 5 mW/cm2 while in the customer's home. 2mW/cm2 stated here is our own voluntary standard. (1mW/cm2 for Canada)

12.1. Equipment

- Electromagnatic radiation monitor
- Glass thermometer 212°F or 100°C
- 600cc glass beaker

12.2. Procedure for measuring radiation leakage

Note before measuring.

- Do not exceed meter full scale deflection. Leakage monitor should initially be set to the highest scale.
- To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area in Figure no faster than 1 inch/sec (2.5cm/sec).
- Leakage with the outer panel removed ..... less than 5mW/cm2.
- Leakage for a fully assembled oven with door normally closed ..... less than 2mW/cm 2 (1mW/cm 2 for Canada).
- Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door ..... less than 2mW/cm 2.

1. **Pour 275 ± 15cc (9ozs± 1/2oz) of 20°C ± 5°C (68° ± 9°F) water in a beaker which is graduated to 600cc, and place in the center of the oven.**
2. **Set the radiation monitor to 2450MHz and use it following the manufacturer's recommended test procedure to assure correct results.**
3. **When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.**
4. **Tap the start pad or set the timer and with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.**

12.2.1. Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING
Avoid contacting any high voltage parts.

12.2.2. Measurements with a fully assembled oven.

After all components, including outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening and air inlet openings.

12.3. Record keeping and notification after measurement

- **After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.**
  A copy of this repair ticket and the microwave leakage reading should be kept by repair facility.
- **Should the radiation leakage be more than 2 mW/cm^2 (1mW/cm for Canada) after determining that all parts are in good condition, functioning properly, and genuine replacement parts as listed in this manual have been used, immediately notify PASC, PSC or PCI.**

12.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

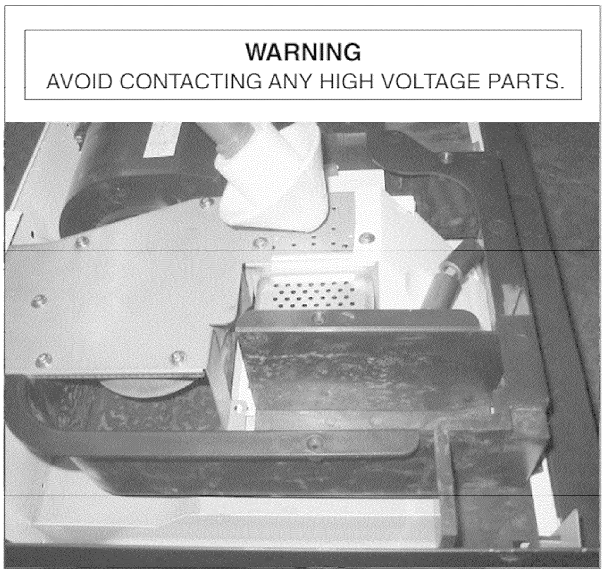

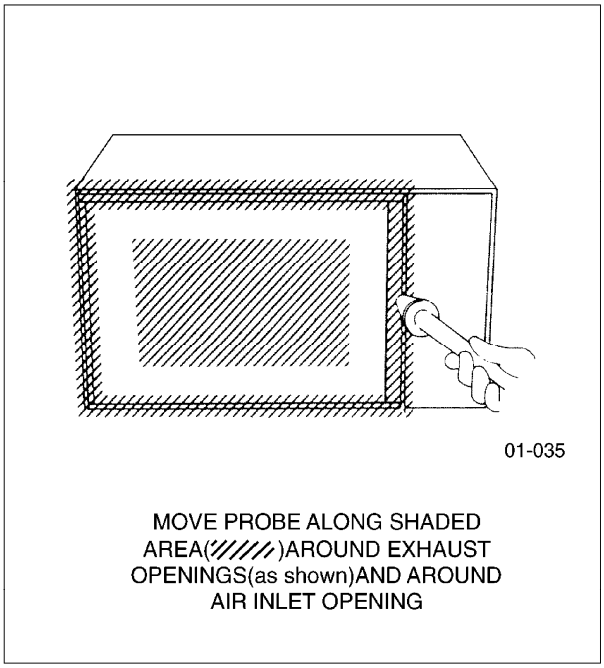

13. TROUBLESHOOTING GUIDE

CAUTION

1. **Check grounding before checking for trouble.**
2. **Be careful of high voltage circuit.**
3. **Discharge high voltage capacitor.**
4. **When checking the continuity of the switches or the high voltage transformer,disconnect one lead wir from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter. / When disconnecting a plastic connector from a terminal, you must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire m be damaged or the connector cannot be removed.**
5. **Do not touch any parts of the circuitry on the digital programmer circuit, since static electric discharg may damage this control panel. / Always touch yourself to ground while working on this panel to discharge any static charge in your body.**
6. **120V AC is present on the digital programmer circuit (Terminals of power relay's and primary circuit o low voltage transformer). When troubleshooting, be cautious of possible electrical shock hazard.**

First of all operate the microwave oven following the correct operating procedures in order to find the exact cause of any trouble.

	SYMPTOM	CAUSE	CORRECTIONS
1.	Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness Open thermal cutout (Magnetron) 2. Open low voltage transformer Defective DPC 3. 4.	Check fan motor when thermal cutout is defective.
2.	No display and no operation at all. / Fuse is blown.	1. Shorted lead wire harness Defective primary latch switdh 2. (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective Inverter Power Supply (U) Refer to component test procedure	Check adjustment of primary, secondary latch switch and sh switch including door. Refer to Inverter PCB Troubleshooting.
		NOTE 1: All of these switches must be replaced at the same time. Check continuity of power relay B (RY-1)'s contacts (between 1 and and if it has continuity, replace power relay B (RY-1) also.	
3.	Oven does not accept key input(Program)	1. Key input is not insequence Open or loose connection of 2. membrane key pad to DPC (Flat cable) 3. Shorted or open membrane key board 4. Defective DPC	Refer to operation procedure. Refer to DPC troubleshooting.
4.	Fan motor turn on when oven is plugged in with door closed.	3. Misadjustment or loose wiring of secondary latch switch 4. Defective secondary latch switch	Adjust door and latch switches

	SYMPTOM	CAUSE	CORRECTIONS
5.	Timer starts count down but no microwave oscillation. (No heat while oven lamp and fan motor turn on)	1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and causing magnetron to lower output and/or be intermittent. 3. Defective high voltage component H.V. Inverter Power Supply (u) Magnetron 4. Open or loose wiring of power relay B (RY-1) 5. Defective primary latch switch 6. Defective DPC or power relay B (RY-1)	Adjust door and latch switches Check high voltage componen according to component test procedure and replace if it is defective. Refer to DPC troubleshooting
6.	Oven can program but timer does not start countdown.	1. Open or loose wiring of secondary latch switch 2. Off-alignment of secondary latch switch 3. Defective secondary latch switch	Adjust door and latch switches
7.	Microwave output is low. Oven takes longer time to cook food.	1. Decrease in power source voltage 2. Open or loose wiring of magnetron filament circuit.(Intermittent oscillation) 3. Aging change of magnetron	Consult electrician
8.	Fan motor turns on and turntable rotates when door is opened.	1. Shorted primary latch switch	
9.	Oven does not operate and return to plugged in mode as soon as start pad is pressed.	1. Defective DPC	Check tighten screws on escutcheon base bracket, D.P.C board.
10.	Loud buzzing noise can be heard.	1. Loose fan and fan motor	
11.	Turntable motor does not rotate.	1. Open or loose wiring of turntable motor 2. Defective turntable motor	
12.	Oven stops operation during cooking.	1. Open or loose wiring of primary and secondary latch switch 2. Operation of thermal cutout	Adjust door and latch switches
13.	Oven returns to plugged in mode after 18 seconds elapses on the Auto sensor cooking mode.	1. Open or loose wiring of sensor terminal from DPC 2. Open steam sensor 3. Defective DPC	

13.1. Trouble related to digital programmer circuit

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIC
No display when oven is first plugged in. Oven is dead.	1	Fuse pattern of DPC	Normal	→ STEP 2
			Open (NOTE)	Shorted Circuit of ZNR,L.V.T., Oven Lamp etc.Replace D
	2	Low voltage transformer (LVT) secondary voltage	Abnormal 0V	LVT
			Normal	→ Step 3
	3	IC-1 pin 47 voltage	Abnormal	IC-10
			Normal = 5V	IC-1, CX320, Displa
NOTE Procedure of fuse pattern repairing is as follows: 1. When the fuse pattern (PF2) opens. (1) Remove the jumper wire (PF1). (2) Insert the removed jumper wire (PF1) to "(PF2)" position and solder it. If both "PF1" and "PF2" fuse patterns are open, please replace DPC. 2. When the fuse pattern (PF4) opens. (1) Remove the jumper wire (PF3). (2) Insert the removed jumper wire (PF3) to "(PF4)" position and solder it. If both "PF3" and "PF4" fuse patterns are open, please replace DPC. NOTE:* At the time of these repairs, make visual inspection of the varistor for burning damage and examine the transformer with tester for the presence of layer short-circuit (check primary coil resistanc If any abnormal condition is detected, replace the defective parts.				
No key input	1	Membrane switch continuity	Abnormal	Membrane switch
			Normal	IC-1
No beep sound	1	IC-1 pin 8 voltage	Abnormal	IC-1
			Normal	BUZZER, Q224
Power relay A(RY-1) does not turn oneven though the program has been setand the start pad is tapped	1	IC-1 pin 41 voltage while operation	Abnormal	IC-1
			Normal = 5V	→ Step 2
	2	Short circuit between pin 8 and pin13 of IC-220	Still not turn on	RY-2
			RY-2 turns on	IC-220
No microwave oscillation at any powersetting	1	IC-1 pin 22 voltages while operation at high power	Abnormal	IC-1
			Normal 22---5V	→ Step 2
	2	Q220 transistor	Abnormal	Q220
			Normal	RY-1
Dark or unclear display	1	Replace display and check operation	Normal	DISPLAY
			Abnormal	IC-1
Missing or lighting of unnecessarysegment	1	Replace IC-1 and check operation	Normal	IC-1
			Abnormal	DISPLAY

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIC
H97/H98 appears in window and ovenstops operation. Program High powerfor 1 minute and conduct following testquickly, unless H97/H98 appears andoven stops. [NEW H.V.]	1	Unplug CN702(2 pin) connector and measure voltage between terminals	0V	1. Latch Switch 2. DPC/Power Relay
			AC line voltage of 120V	→ Step 2
	2	Unplug CN701(3 pin) connector and measure pin 1 voltage	0V	DPC
			Approx. AC 3V	Magnetron

13.2. Troubleshooting of inverter circuit (U) and magnetron [NEW H.V.]

This oven is programmed with a self diagnostics failure code system which will help for troubleshooting. H97, H98, and H99 are the provided failure codes to indicate magnetron and inverter circuit problem areas. This section explains failure codes of H97, H98, and H99. First, you must program the DPC by pressing [Clock] , [Timer] , [Start] , [Power Level] . Program unit for operation. H97, H98, H99 appears in display window a short time after start key is pressed and there is no microwave oscillation.

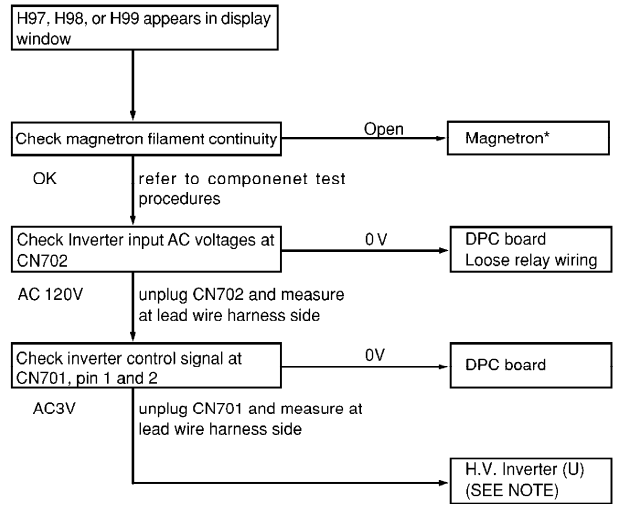
H97, H98, or H99 appears in display window
Check magnetron filament continuity
Open
Magnetron*
OK
refer to componenet test procedures
Check Inverter input AC voltages at CN702
0 V
DPC board
Loose relay wiring
AC 120V
unplug CN702 and measure at lead wire harness side
Check inverter control signal at CN701, pin 1 and 2
0V
DPC board
AC3V
unplug CN701 and measure at lead wire harness side
H.V. Inverter (U) (SEE NOTE)

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT RE-ADJUST PRESET VOLUME on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

Alternate way to troubleshoot oven with AC Ampere meter used

H97, H98, H99 appears in display window a short time after start key is pressed and no microwave oscillation with AC Ampere meter used for troubleshooting

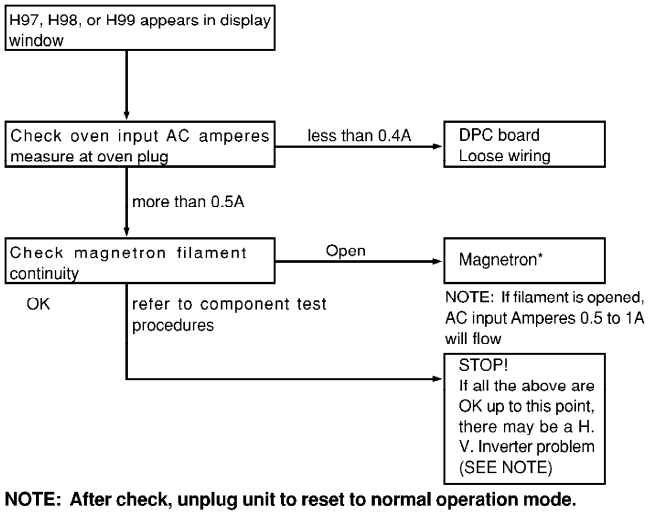
H97, H98, or H99 appears in display window
Check oven input AC amperes measure at oven plug
less than 0.4A
DPC board
Loose wiring
more than 0.5A
Check magnetron filament continuity
Open
Magnetron*
OK
refer to component test procedures
NOTE: If filament is opened, AC input Amperes 0.5 to 1A will flow
STOP!
If all the above are OK up to this point, there may be a H. V. Inverter problem (SEE NOTE)

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT

RE-ADJUST PRESET VOLUME on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

13.3. How to check the semiconductors using an OHM meter

Diode



	FORWARD	REVERSE
A-K	SMALL	∞

Transistor

NPN Transistor

2SC·····

2SD·····

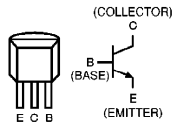

	FORWARD	REVERSE
B-E	SMALL	∞
B-C	SMALL	∞
C-E	∞	∞

PNP Transistor

2SA·····

2SB·····



	FORWARD	REVERSE
B-E	SMALL	∞
C-B	SMALL	∞
C-E	∞	∞

Digital Transistor
PNP Transistor



	FORWARD	REVERSE
E-B	10kΩ ~ 30kΩ	10kΩ ~ 30kΩ
C-B	50kΩ ~ 90kΩ	∞
C-E	40kΩ ~ 80kΩ	∞

IGBT
(INSULATED GATE BIPOLAR TRANSISTOR)

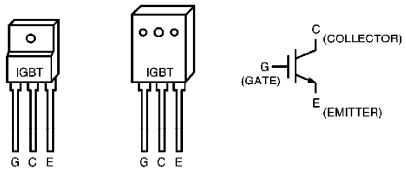

	FORWARD	REVERSE
E-C	SMALL	∞
E-G	∞	∞
C-G	∞	∞

14. EXPLODED VIEW AND PARTS LIST

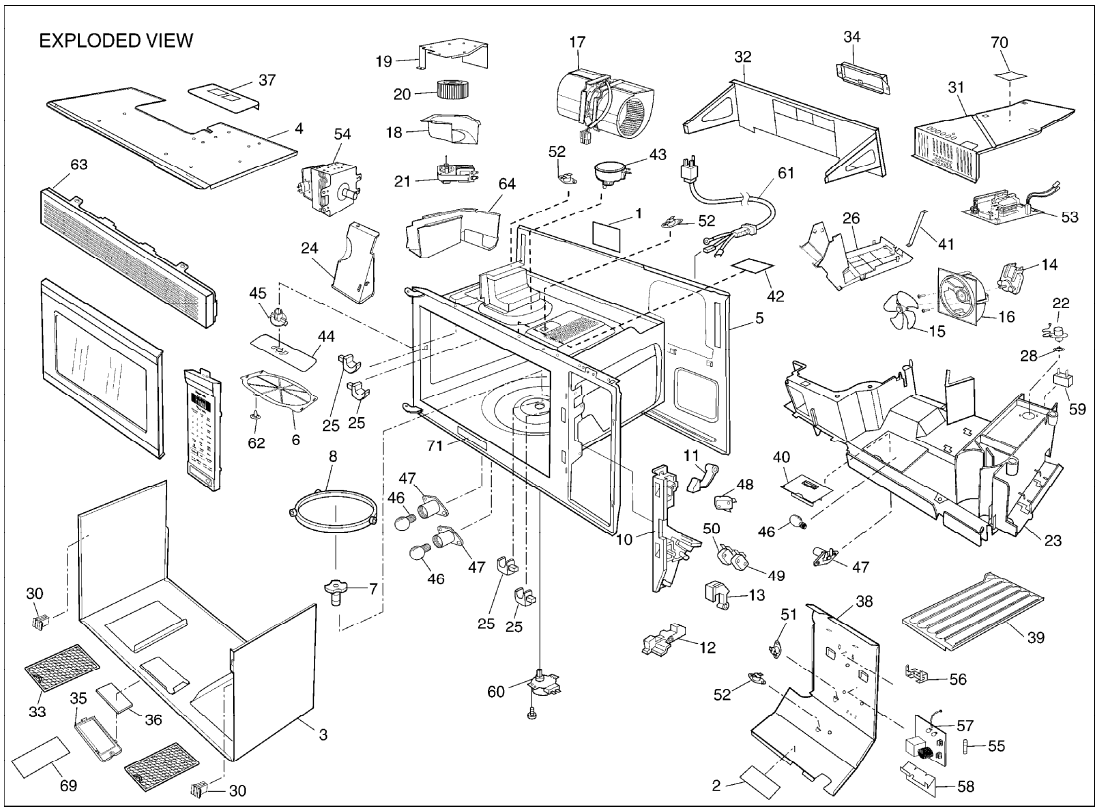

15. PARTS LIST

NOTE:

1. **When ordering replacement part(s), please use part number(s) shown in this part list.**
   Do not use description of the part.
2. **Important safety notice:**
   Components identified by ⚠ mark have special characteristics important for safety.
   When replacing any of these components, use only manufacture's specified parts.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00205H00AP	CAUTION LABEL	1	APH
1		F00067600CP	CAUTION LABEL	1	CPH
2		F00335H00AP	FUSE LABEL	1	
3		F110D5H00SAP	CABINET BODY (U)	1	S262SF
3		F110D5H10BAP	CABINET BODY (U)	1	S262BF, S252BF
3		F110D5H10HAP	CABINET BODY (U)	1	S262WF, S252WF
4		F100D5H00AP	BASE PLATE (U)	1	
5	⚠	F201A5H00AP	OVEN (U)	1	S262SF/BF/WF
5	⚠	F201A5H20AP	OVEN (U)	1	S252BF/WF
6		F20115H00AP	COVER	1	
7		F21314W00AP	PULLY SHAFT	1	
8		J290D-4N30BP	ROLLER RING (U)	1	
10	⚠	E3020-8000BP	DOOR HOOK	1	
11		E3136-8000BP	HOOK LEVER A	1	
12		E31374830AP	HOOK LEVER B	1	
13		E31384830AP	HOOK LEVER C	1	
14		F40015H00AP	FAN MOTOR A	1	FOR INVERTER (U) COOLING
15		F40085H00AP	FAN BLADE	1	FOR INVERTER (U) COOLING
16		F40255H00AP	ORIFICE	1	
17		F401W5H00AP	BLOWER MOTOR (U)	1	
18		F42485H00AP	FAN CASE C	1	
19		F41585H00AP	FAN CASE INSTALLATION PLATE	1	
20		F42505H00AP	SIROCCO FAN C	1	
21		F42675H00AP	FAN MOTOR B	1	FOR MAGNETRON COOLING
22		F601L5H00AP	SENSOR (BU)	1	S262SF/BF/WF
23		F40245H00AP	EXHAUST GUIDE A	1	
24		F44775H00AP	EXHAUST GUIDE	1	
25		F20025H00AP	RACK SUPPORT	4	S262SF/BF/WF
26		F65855H00AP	INVERTER BRACKET	1	
28		F62385H00AP	WASHER	1	S262SF/BF/WF
30		F201H5H00AP	MAGNET CASE (U)	2	
31		F16035H00AP	TOP FRONT COVER	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
32		F100T5H00AP	BACK PLATE B (U)	1	
33		F400B5H00AP	FILTER (U)	2	
34		F400K5H00AP	EXHAUST ADAPTER	1	
35		F63175H00SAP	GLASS PLATE HOLDER	1	S262SF
35		F63175H10BAP	GLASS PLATE HOLDER	1	S262BF, S252BF
35		F63175H10HAP	GLASS PLATE HOLDER	1	S262WF, S252WF
36		F64375H00AP	GLASS PLATE	1	
37		F41575H00AP	FAN INSTALLATION PLATE	1	
38		F42175H00AP	COVER PLATE	1	
39		F42205H00AP	COVER PLATE B	1	
40		F607V5H00AP	LAMP COVER (U)	1	
41		F61845H00AP	GROUNDING PLATE	1	
42		F60405H00AP	LAMP MEMBRANE	1	
43		F61445H00AP	STIRRER MOTOR	1	
44		F20155H00AP	STIRRER	1	
45		F20165H00AP	ANTENNA SUPPORT	1	
46		F60305H00AP	INCANDESCENT LAMP	3	
47		F61525H00AP	SOCKET	3	
48	⚠	A6142-F60	MICROSWITCH	1	(PRIMARY LATCH SWITCH) (V-15G-3C26)
49	⚠	A61425180AP	MICROSWITCH	1	(SECONDARY LATCH SWITCH) (L-3C2-2)
50	⚠	A61785180AP	MICROSWITCH	1	(SHORT SWITCH) (L-2C2-2)
51		F61455H00AP	THERMAL CUTOUT	1	
52		F61455E60XN	THERMAL CUTOUT	3	
53	⚠	A606Y4T00AP	H.V.INVERTER (U)	1	APH
53	⚠	A606Y4T00CP	H.V.INVERTER (U)	1	CPH
54	⚠	2M261-M32F	MAGNETRON	1	APH
54	⚠	2M261-M32G	MAGNETRON	1	CPH
55	⚠	B62308250AP	FUSE	1	18A/125V
56		B62314000AP	FUSE HOLDER	1	APH
57		J692Y4T00CP	NOISE FILTER (U)	1	CPH
58		F82605H00AP	NOISE FILTER BRACKET	1	CPH
59		F66985H00AP	MOTOR CAPACITOR	1	
60		F63264080AP	TURNTABLE MOTOR	1	
61	⚠	F900C5H00AP	AC CORD W/PLUG	1	APH
61	⚠	F900C5H00CP	AC CORD W/PLUG	1	CPH
62		F90804W00AP	CANOE CLIP	1	FOR COVER
63		F101V5H00AP	VENT GRILLE (U)	1	S262SF
63		F101V5H10BAP	VENT GRILLE (U)	1	S262BF, S252BF
63		F101V5H10HAP	VENT GRILLE (U)	1	S262WF, S252WF
64		F48435H00AP	INHALE GUIDE A	1	
69		F01725H00AP	CAUTION LABEL	1	
70		F00565H00AP	CAUTION LABEL	1	
71		F03345H10AP	MENU LABEL	1	S262SF/BF/WF APH
71		F03345H20AP	MENU LABEL	1	S252BF/WF APH
71		F03345H10CP	MENU LABEL	1	S262SF/BF/WF CPH

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
71		F03345H20CP	MENU LABEL	1	S252BF/WF CPH

16. DOOR ASSEMBLY

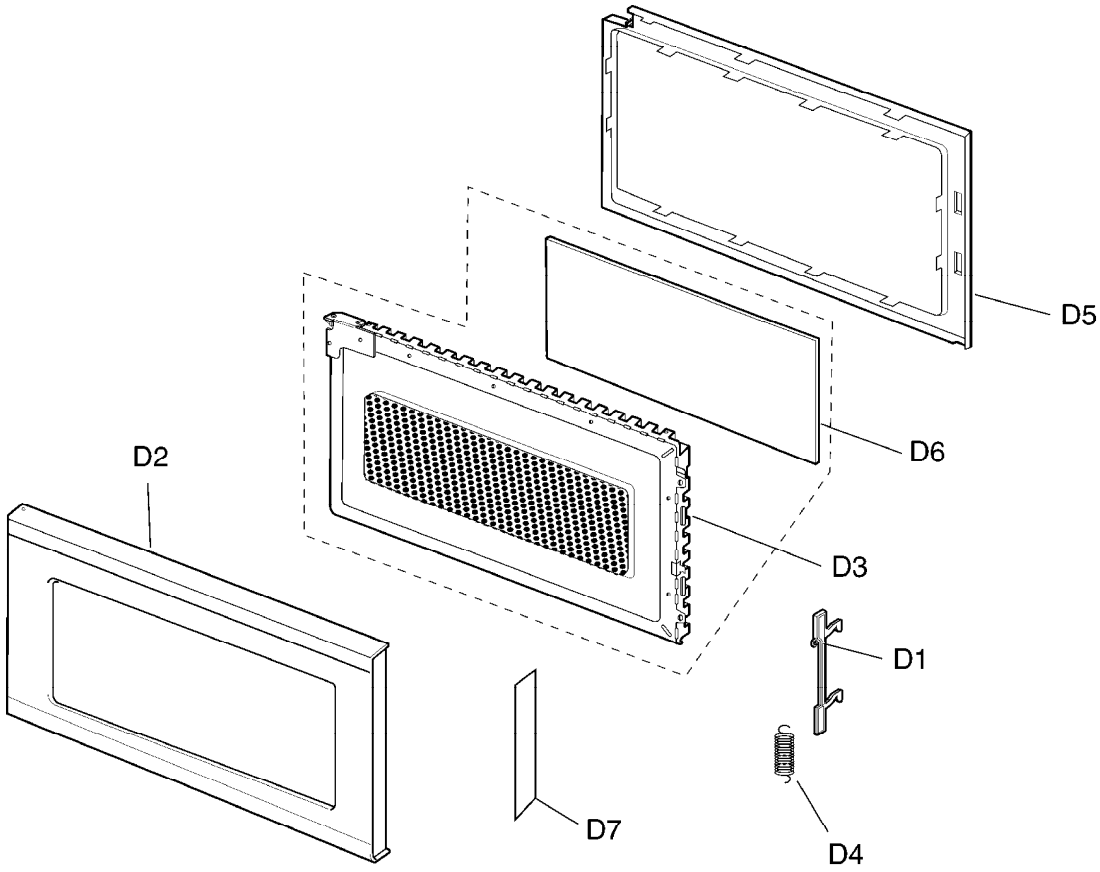

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F3018-1200	DOOR KEY A	1	
D2	⚠	F302A5H00AP	DOOR A (U)	1	S262SF
D2	⚠	F302A5H00BAP	DOOR A (U)	1	S262BF, S252BF
D2	⚠	F302A5H00HAP	DOOR A (U)	1	S262WF, S252WF
D3	⚠	F302K5H00AP	DOOR E (U)	1	
D4		F30214000AP	DOOR KEY SPRING	1	
D5	⚠	F30855H00AP	DOOR C	1	
D6	⚠	F31455H00AP	DOOR SCREEN A	1	
D7		F02459660AP	DHHS LABEL	1	APH
D7		F04114180CP	DHHS LABEL	1	CPH

17. WIRING MATERIALS

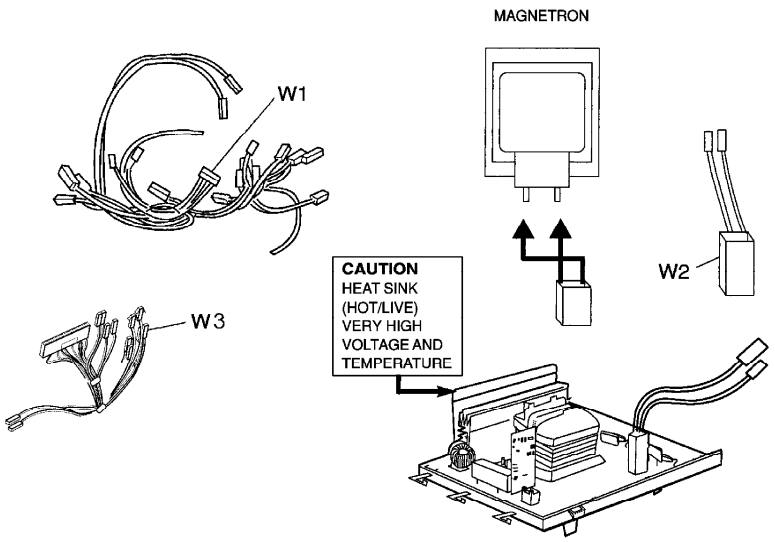

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
W1		F030A5H00AP	LEAD WIRE HARNESS	1	APH
W1		F030A5H00CP	LEAD WIRE HARNESS	1	CPH
W2		F030E5H00AP	H.V.LEAD WIRE	1	APH
W2		F030E5H00CP	H.V.LEAD WIRE	1	CPH
W3		F03535H00AP	LEAD WIRE HARNESS U	1	

18. ESCUTCHEON BASE ASSEMBLY

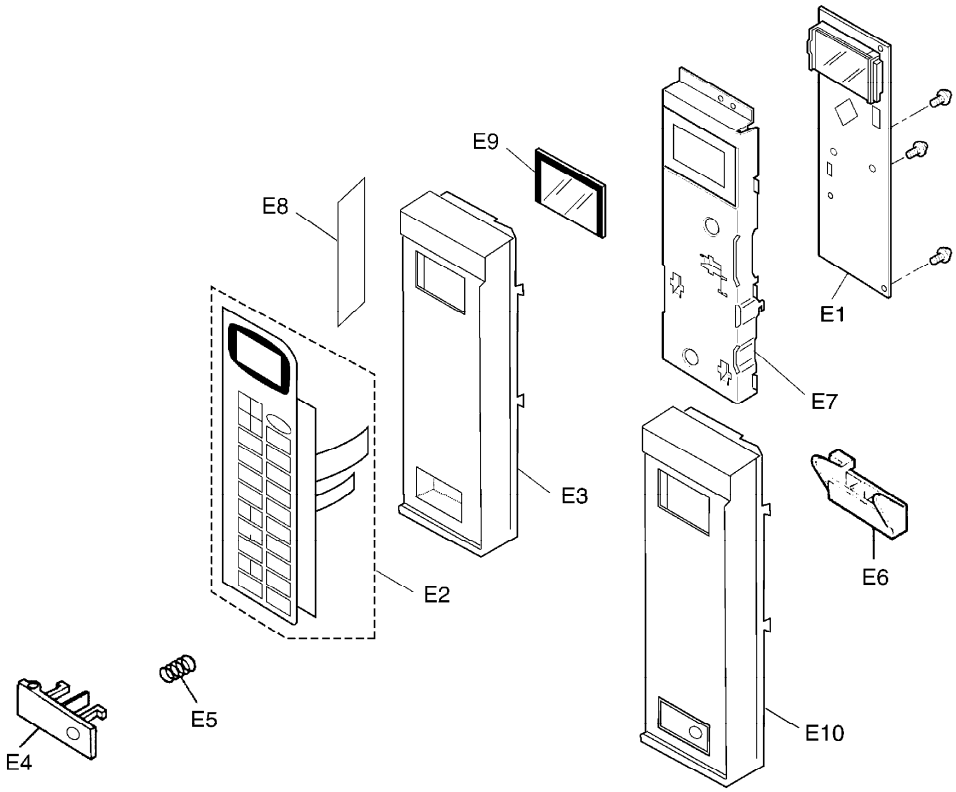

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E1		F603L5H00AP	D.P.CIRCUIT	1	S262SF APH, S262BF/WF APH
E1		F603L5H20AP	D.P.CIRCUIT	1	S252BF/WF APH
E1		F603L5H00CP	D.P.CIRCUIT	1	S262SF CPH, S262BF/WF CPH
E1		F603L5H20CP	D.P.CIRCUIT	1	S252BF/WF CPH
E2		F630Y5H10BAP	MEMBRANE SWITCH (U)	1	S262SF/BF APH
E2		F630Y5H10HAP	MEMBRANE SWITCH (U)	1	S262WF APH
E2		F630Y5H20BAP	MEMBRANE SWITCH (U)	1	S252BF APH
E2		F630Y5H20HAP	MEMBRANE SWITCH (U)	1	S252WF APH
E2		F630Y5H10BCP	MEMBRANE SWITCH (U)	1	S262SF/BF CPH
E2		F630Y5H10HCP	MEMBRANE SWITCH (U)	1	S262WF CPH
E2		F630Y5H20BCP	MEMBRANE SWITCH (U)	1	S252BF CPH
E2		F630Y5H20HCP	MEMBRANE SWITCH (U)	1	S252WF CPH
E3		F80345H10BAP	ESCUTCHEON BASE	1	S262BF, S252BF
E3		F80345H10HAP	ESCUTCHEON BASE	1	S262WF, S252WF
E4		F80725H10BAP	DOOR OPENING BUTTON	1	S262BF, S252BF
E4		F80725H10HAP	DOOR OPENING BUTTON	1	S262WF, S252WF
E5		F80375950AP	OPENING BUTTON SPRING	1	
E6		F82565H00AP	DOOR OPENING LEVEL	1	
E7		F81275H00AP	BACK PLATE	1	
E8		F00075H00AP	NAME PLATE	1	S262SF APH
E8		F00075H10BAP	NAME PLATE	1	S262BF APH
E8		F00075H10HAP	NAME PLATE	1	S262WF APH
E8		F00075H20BAP	NAME PLATE	1	S252BF APH
E8		F00075H20HAP	NAME PLATE	1	S252WF APH
E8		F00075H00CP	NAME PLATE	1	S262SF CPH
E8		F00075H10BCP	NAME PLATE	1	S262BF CPH
E8		F00075H10HCP	NAME PLATE	1	S262WF CPH
E8		F00075H20BCP	NAME PLATE	1	S252BF CPH
E8		F00075H20HCP	NAME PLATE	1	S252WF CPH
E9		F80025H00AP	ESCUTCHEON B	1	
E10		F800L5H00AP	ESCUTCHEON BASE (U)	1	S262SF

19. PACKING AND ACCESORIES

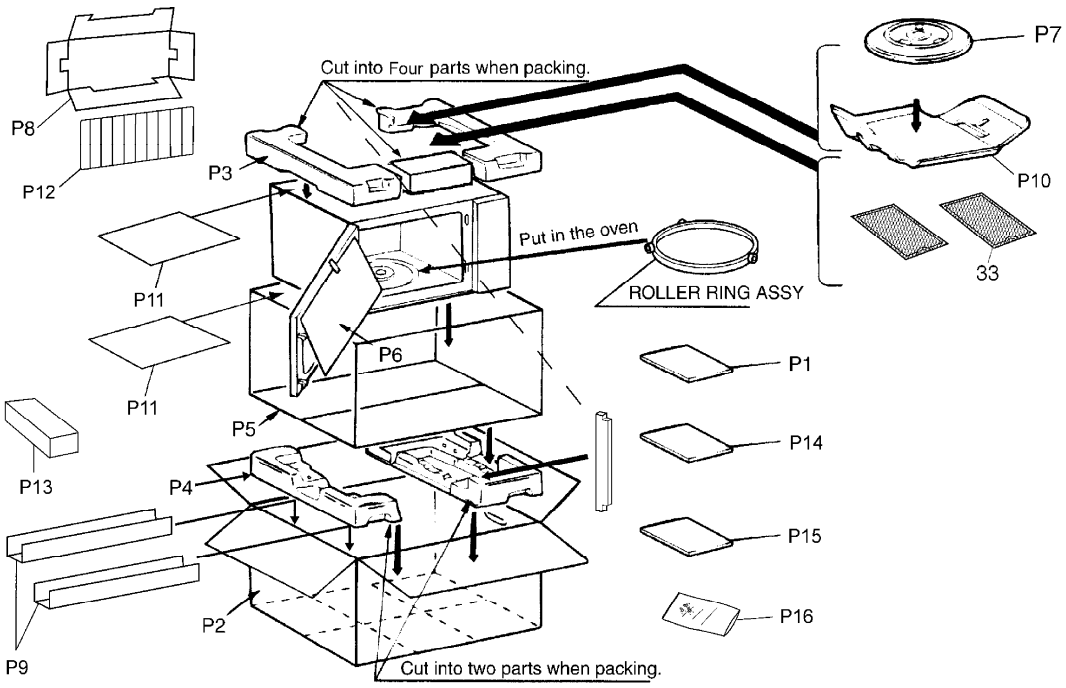

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
P1		F00035H00AP	INSTRUCTION MANUAL	1	APH
P1		F00035H00CP	INSTRUCTION MANUAL	1	CPH
P2		F01025H00AP	PACKING CASE PAPER	1	S262SF APH
P2		F01025H10BAP	PACKING CASE PAPER	1	S262BF APH
P2		F01025H10HAP	PACKING CASE PAPER	1	S262WF APH
P2		F01025H20BAP	PACKING CASE PAPER	1	S252BF APH
P2		F01025H20HAP	PACKING CASE PAPER	1	S252WF APH
P2		F01025H00CP	PACKING CASE PAPER	1	S262SF CPH
P2		F01025H10BCP	PACKING CASE PAPER	1	S262BF CPH
P2		F01025H10HCP	PACKING CASE PAPER	1	S262WF CPH
P2		F01025H20BCP	PACKING CASE PAPER	1	S252BF CPH
P2		F01025H20HCP	PACKING CASE PAPER	1	S252WF CPH
P3		F01045H00AP	UPPER FILLER	1	
P4		F01055H00AP	LOWER FILLER	1	
P5		F01065H00AP	P.E.BAG	1	
P6		F01075H00AP	DOOR SHEET	1	
P7		A06015H00AP	COOKING TRAY	1	
P8		F01175H00AP	TRAY PACKING B	1	S262SF/BF/WF
P9		F01485H00AP	REINFORCE BRACKET	2	
P10		F01085H00AP	TRAY PACKING	1	
P11		F01925H00AP	SHEET	2	
P12		F06025H00AP	OVEN RACK	1	S262SF/BF/WF
P13		F02185H00AP	PROTECTOR PACKING	1	
P14		F03135H00AP	INSTALLATION INSTRUCTION	1	
P15		F04315H00AP	UPPER-CABINET TEMPLATE	1	APH
P15		F04315H00CP	UPPER-CABINET TEMPLATE	1	CPH
P16		F011F5H00AP	ATTACHMENT	1	
33		F400B5H00AP	FILTER (U)	2	

20. DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM

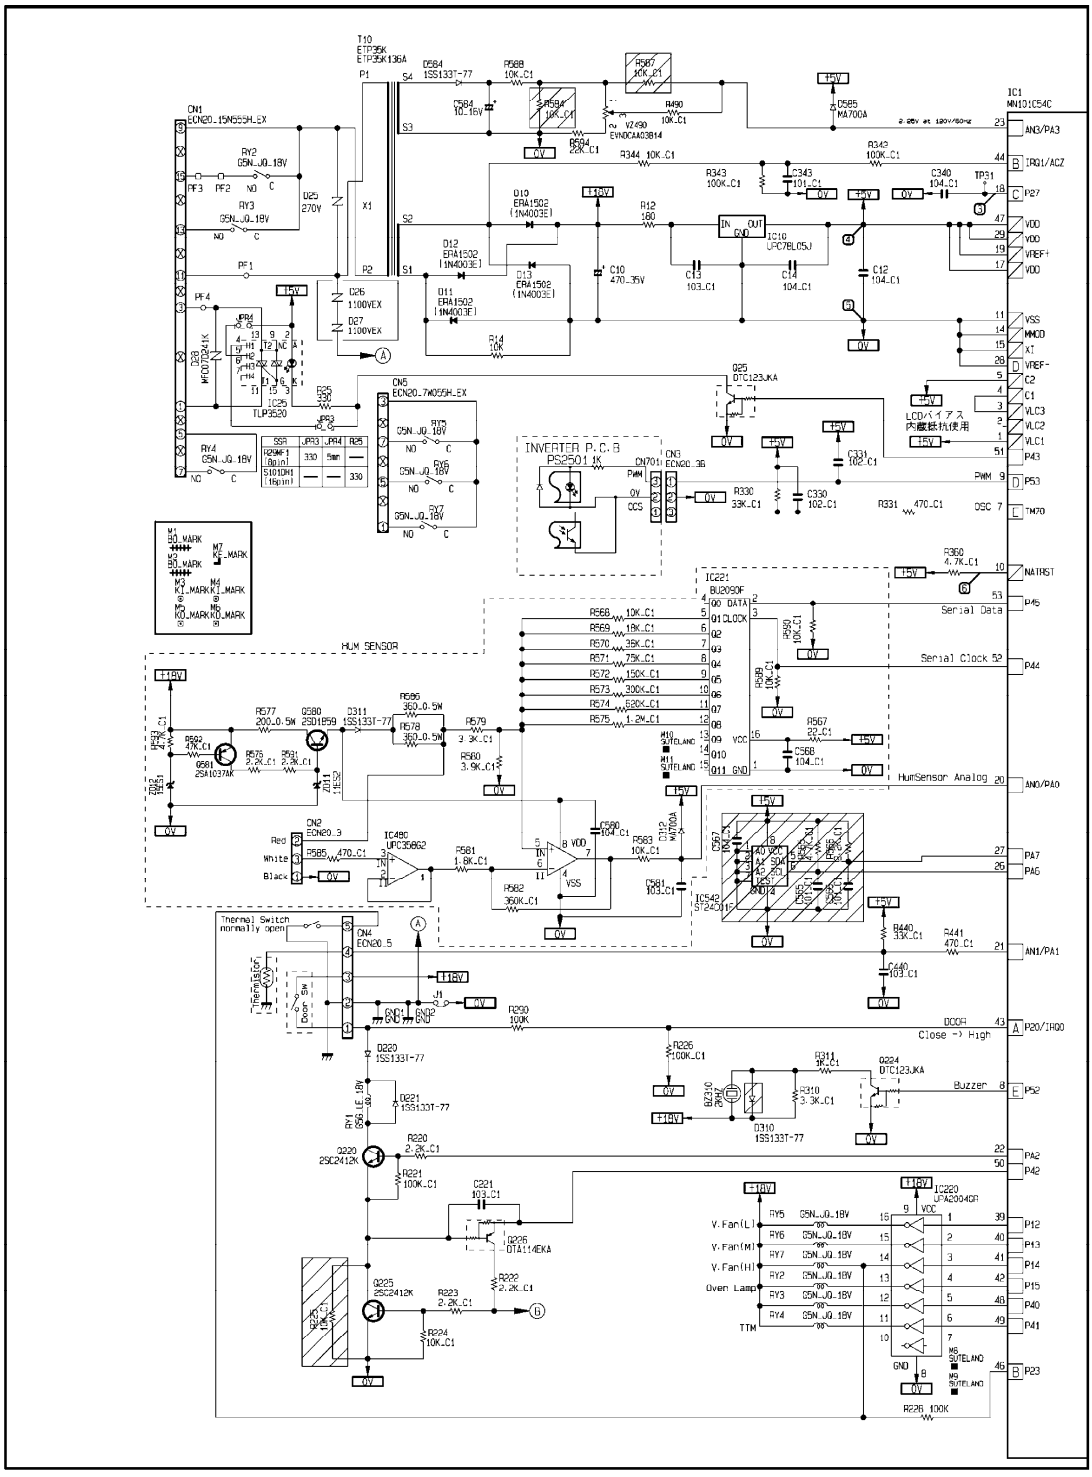

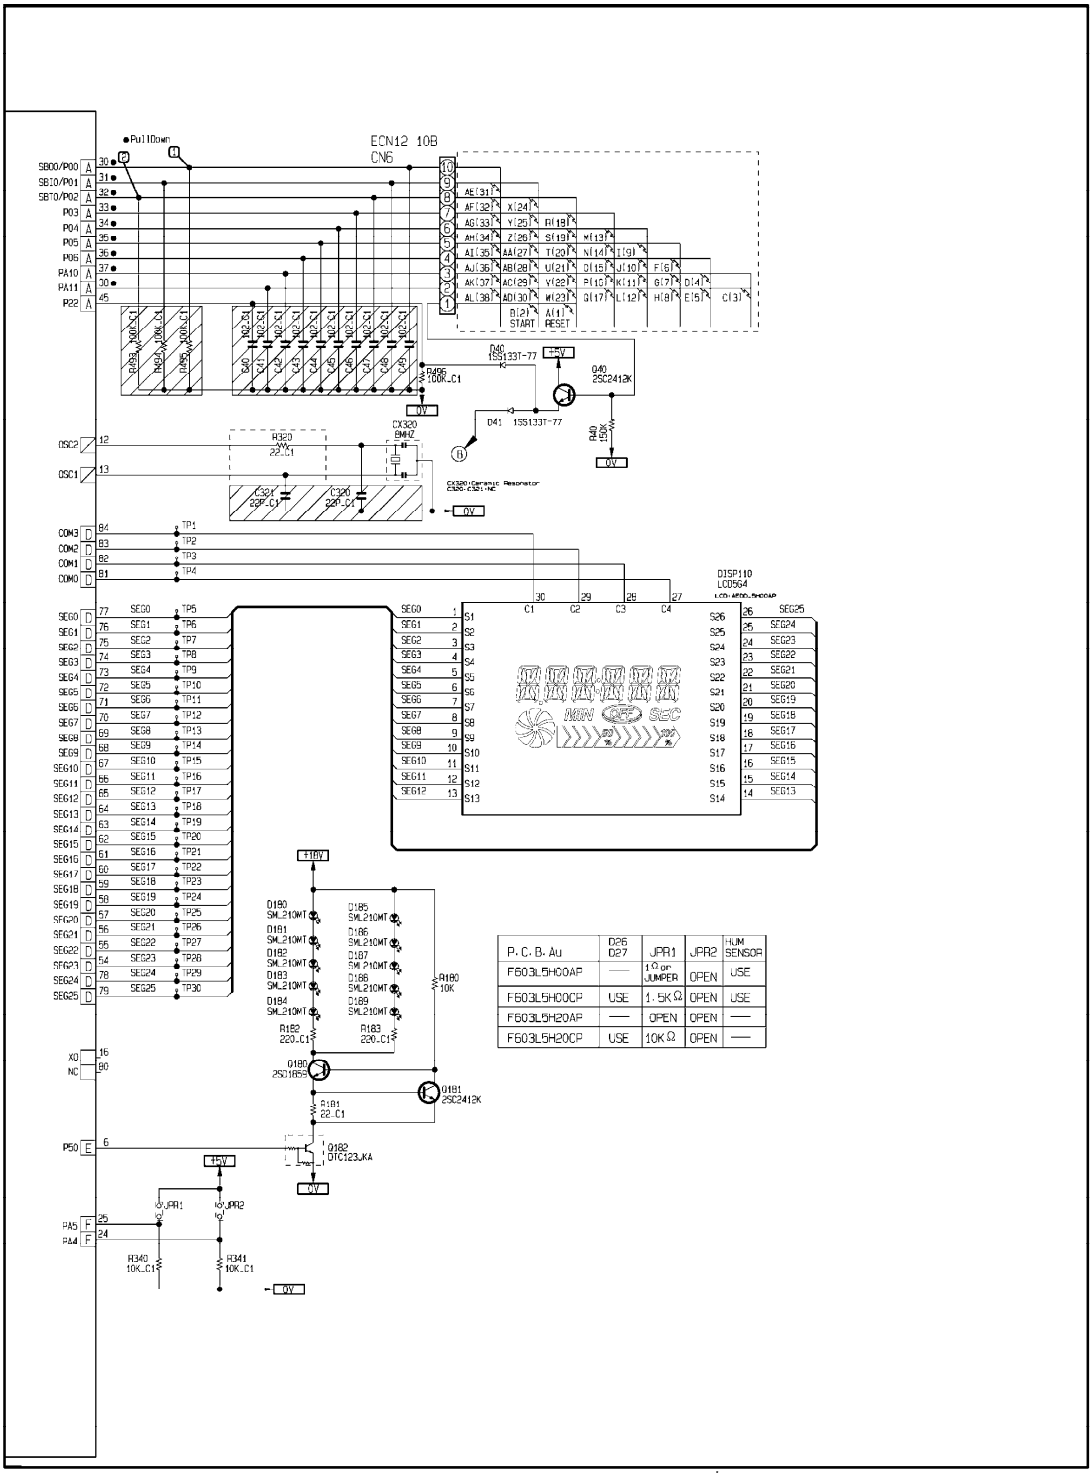

21. DIGITAL PROGRAMMER CIRCUIT

PARTS LIST

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310		AEFBTFM571	BUZZER	1	2.0KHz
C221, C440, C13		AECUU06F103Z	CHIP CAPACITOR	3	0.01 μ F/50V
C582		AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V (S262SF/BF/WF)
C343		AECUU06C101J	CHIP CAPACITOR	1	100PF/50V
C12, C14, C340		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V
C568, C580, C583		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V (S262SF/BF/WF)
C330, C331		AECUU06R102K	CHIP CAPACITOR	2	1000PF/50V
C10		AECETK1V102B	AL CHEM CAPACITOR	1	100 μ F/35V (S262SF/BF/WF)
C10		AECETK1V471B	AL CHEM CAPACITOR	1	470 μ F/35V (S252BF/WF)
C584		AECETS1C100B	AL CHEM CAPACITOR	1	10 μ F/16V
C25		ECQE2A104MWA	CAPACITOR	1	0.1 μ F/250V (APH)
CN1		AEEMXH55515W	CONNECTOR	1	15 Pin
CN2		AEEMXH00703W	CONNECTOR	1	3 Pin (S262SF/BF/WF)
CN3		AEEMXH00703B	CONNECTOR	1	3 Pin
CN4		AEEMXH01H05W	CONNECTOR	1	5 Pin
CN5		AEEMXH05507W	CONNECTOR	1	7 Pin
CN6		AEEM10FDZBTM	CONNECTOR	1	10 Pin
		F66175E40XN	LCD HOLDER	1	
		F67525E40XN	DIFFUSION SHEET	1	
DISP110		AEDDHJ5H00AP	LCD	1	
CX320		AEFOS800MG06	CERAMIC RESONATOR	1	8.0MHz
D10, D11, D12, D13		AEDNERA1502	DIODE	4	
D40, D41, D220, D221, D584		AESS133T-77	DIODE	5	
D585		AEDNRB721Q	DIODE	1	
D312		AEDNRB721Q	DIODE	1	(S262SF/BF/WF)
D25		AERZ271KD10A	VARISTOR	1	
D26, D27		AERZ102KD10A	VARISTOR	2	(CPH)
D28		AERZ241KD07A	ZENER DIODE	1	
D180, D181, D182, D183, D184, D185, D186, D187, D188, D189		AESQSML210MT	CHIP-LED	10	
IC1		MN101C54CDW	L.S.I	1	
IC220		AEICU2004GR	IC	1	
IC480		AEICUPC358G2	IC	1	(S262SF/BF/WF)
IC25		AEICR29MF1	IC	1	
IC10		AEIC78L05J-T	IC	1	
IC221		AEICBU2090F	IC	1	(S262SF/BF/WF)
IC500		AEIC78M15AFH	IC	1	(S262SF/BF/WF)
Q226		AESA14EKE	CHIP DIDI-TRANSISTOR	1	
Q25, Q182, Q224		AESC23JKE	CHIP DIDI-TRANSISTOR	3	
Q180		2SD1859TV2Q	TRANSISTOR	1	
Q581		2SA1037AK	TRANSISTOR	1	(S262SF/BF/WF)
Q40, Q181, Q220, Q225		2SC2412KT146	CHIP TRANSISTOR	4	
R311		AERJ06J102R	CHIP RESISTOR	1	1K Ω , 1/16W, 5%
R224, R340, R341, R344, R490, R588		AERJ06J103R	CHIP RESISTOR	6	10K, 1/16W, 5%
R568, R583, R589, R590		AERJ06J103R	CHIP RESISTOR	4	10K, 1/16W, 5% (S262SF/BF/WF)
R221, R226, R342, R343, R496		AERJ06J104R	CHIP RESISTOR	5	100K, 1/16W, 5%
R575		AERJ06J125R	CHIP RESISTOR	1	1.2M, 1/16W, 5% (S262SF/BF/WF)
R572		AERJ06J154R	CHIP RESISTOR	1	150K, 1/16W, 5% (S262SF/BF/WF)
R581		AERJ06J182R	CHIP RESISTOR	1	1.8K, 1/16W, 5% (S262SF/BF/WF)
R569		AERJ06J183R	CHIP RESISTOR	1	18K, 1/16W, 5% (S262SF/BF/WF)
R181, R320		AERJ06J220R	CHIP RESISTOR	2	22 Ω , 1/16W, 5%
R567		AERJ06J220R	CHIP RESISTOR	1	22 Ω , 1/16W, 5% (S262SF/BF/WF)

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
R182, R183		AERJ06J221R	CHIP RESISTOR	2	220 Ω, 1/16W, 5%
R220, R222, R223		AERJ06J222R	CHIP RESISTOR	3	2.2K, 1/16W, 5%
R594		AERJ06J223R	CHIP RESISTOR	1	22K, 1/16W, 5%
R573		AERJ06J304R	CHIP RESISTOR	1	300K, 1/16W, 5% (S262SF/BF/WF)
R310		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5%
R579		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5% (S262SF/BF/WF)
R330, R440		AERJ06J333R	CHIP RESISTOR	2	33K, 1/16W, 5%
R570		AERJ06J363R	CHIP RESISTOR	1	36K, 1/16W, 5% (S262SF/BF/WF)
R582		AERJ06J364R	CHIP RESISTOR	1	360K, 1/16W, 5% (S262SF/BF/WF)
R580		AERJ06J392R	CHIP RESISTOR	1	3.9K, 1/16W, 5% (S262SF/BF/WF)
R331, R441		AERJ06J471R	CHIP RESISTOR	2	470 Ω, 1/16W, 5%
R585		AERJ06J471R	CHIP RESISTOR	1	470 Ω, 1/16W, 5% (S262SF/BF/WF)
R360		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5%
R593		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5% (S262SF/BF/WF)
R592		AERJ06J473R	CHIP RESISTOR	1	47K, 1/16W, 5%
R574		AERJ06J624R	CHIP RESISTOR	1	620K, 1/16W, 5% (S262SF/BF/WF)
R571		AERJ06J753R	CHIP RESISTOR	1	75K, 1/16W, 5% (S262SF/BF/WF)
R14, R180		AERDY2TJ103T	CARBON FILM RESISTOR	2	10K, 1/4W, 5%
R228, R290		AERDY2TJ104T	CARBON FILM RESISTOR	2	100K, 1/4W, 5%
R40		AERDY2TJ154T	CARBON FILM RESISTOR	1	150K, 1/4W, 5%
R12		AERDY2TJ331T	CARBON FILM RESISTOR	1	330 Ω, 1/4W, 5%
R576, R577, R578, R586		AEROY2F3300T	RESISTOR	4	330 Ω, 1/4W, 5%
VZ490		AEVTZ6TLT103	VARIABLE RESISTOR	1	10K Ω VR
RY1		AEGG5G1A18	POWER RELAY	1	
RY2, RY3, RY4, RY5, RY6, RY7		AEBJQ1A18	POWER RELAY	6	
T10		AETP35K136A	LOW VOLTAGE TRANSFORMER	1	
ZD12		AESZMTZJ150B	ZENER DIODE	1	(S262SF/BF/WF)

03/02 / S-5H0 / S-5H1 / S-5H2 / Printed in China